

R1

Wireless Remote Fob

User Manual

TTLock

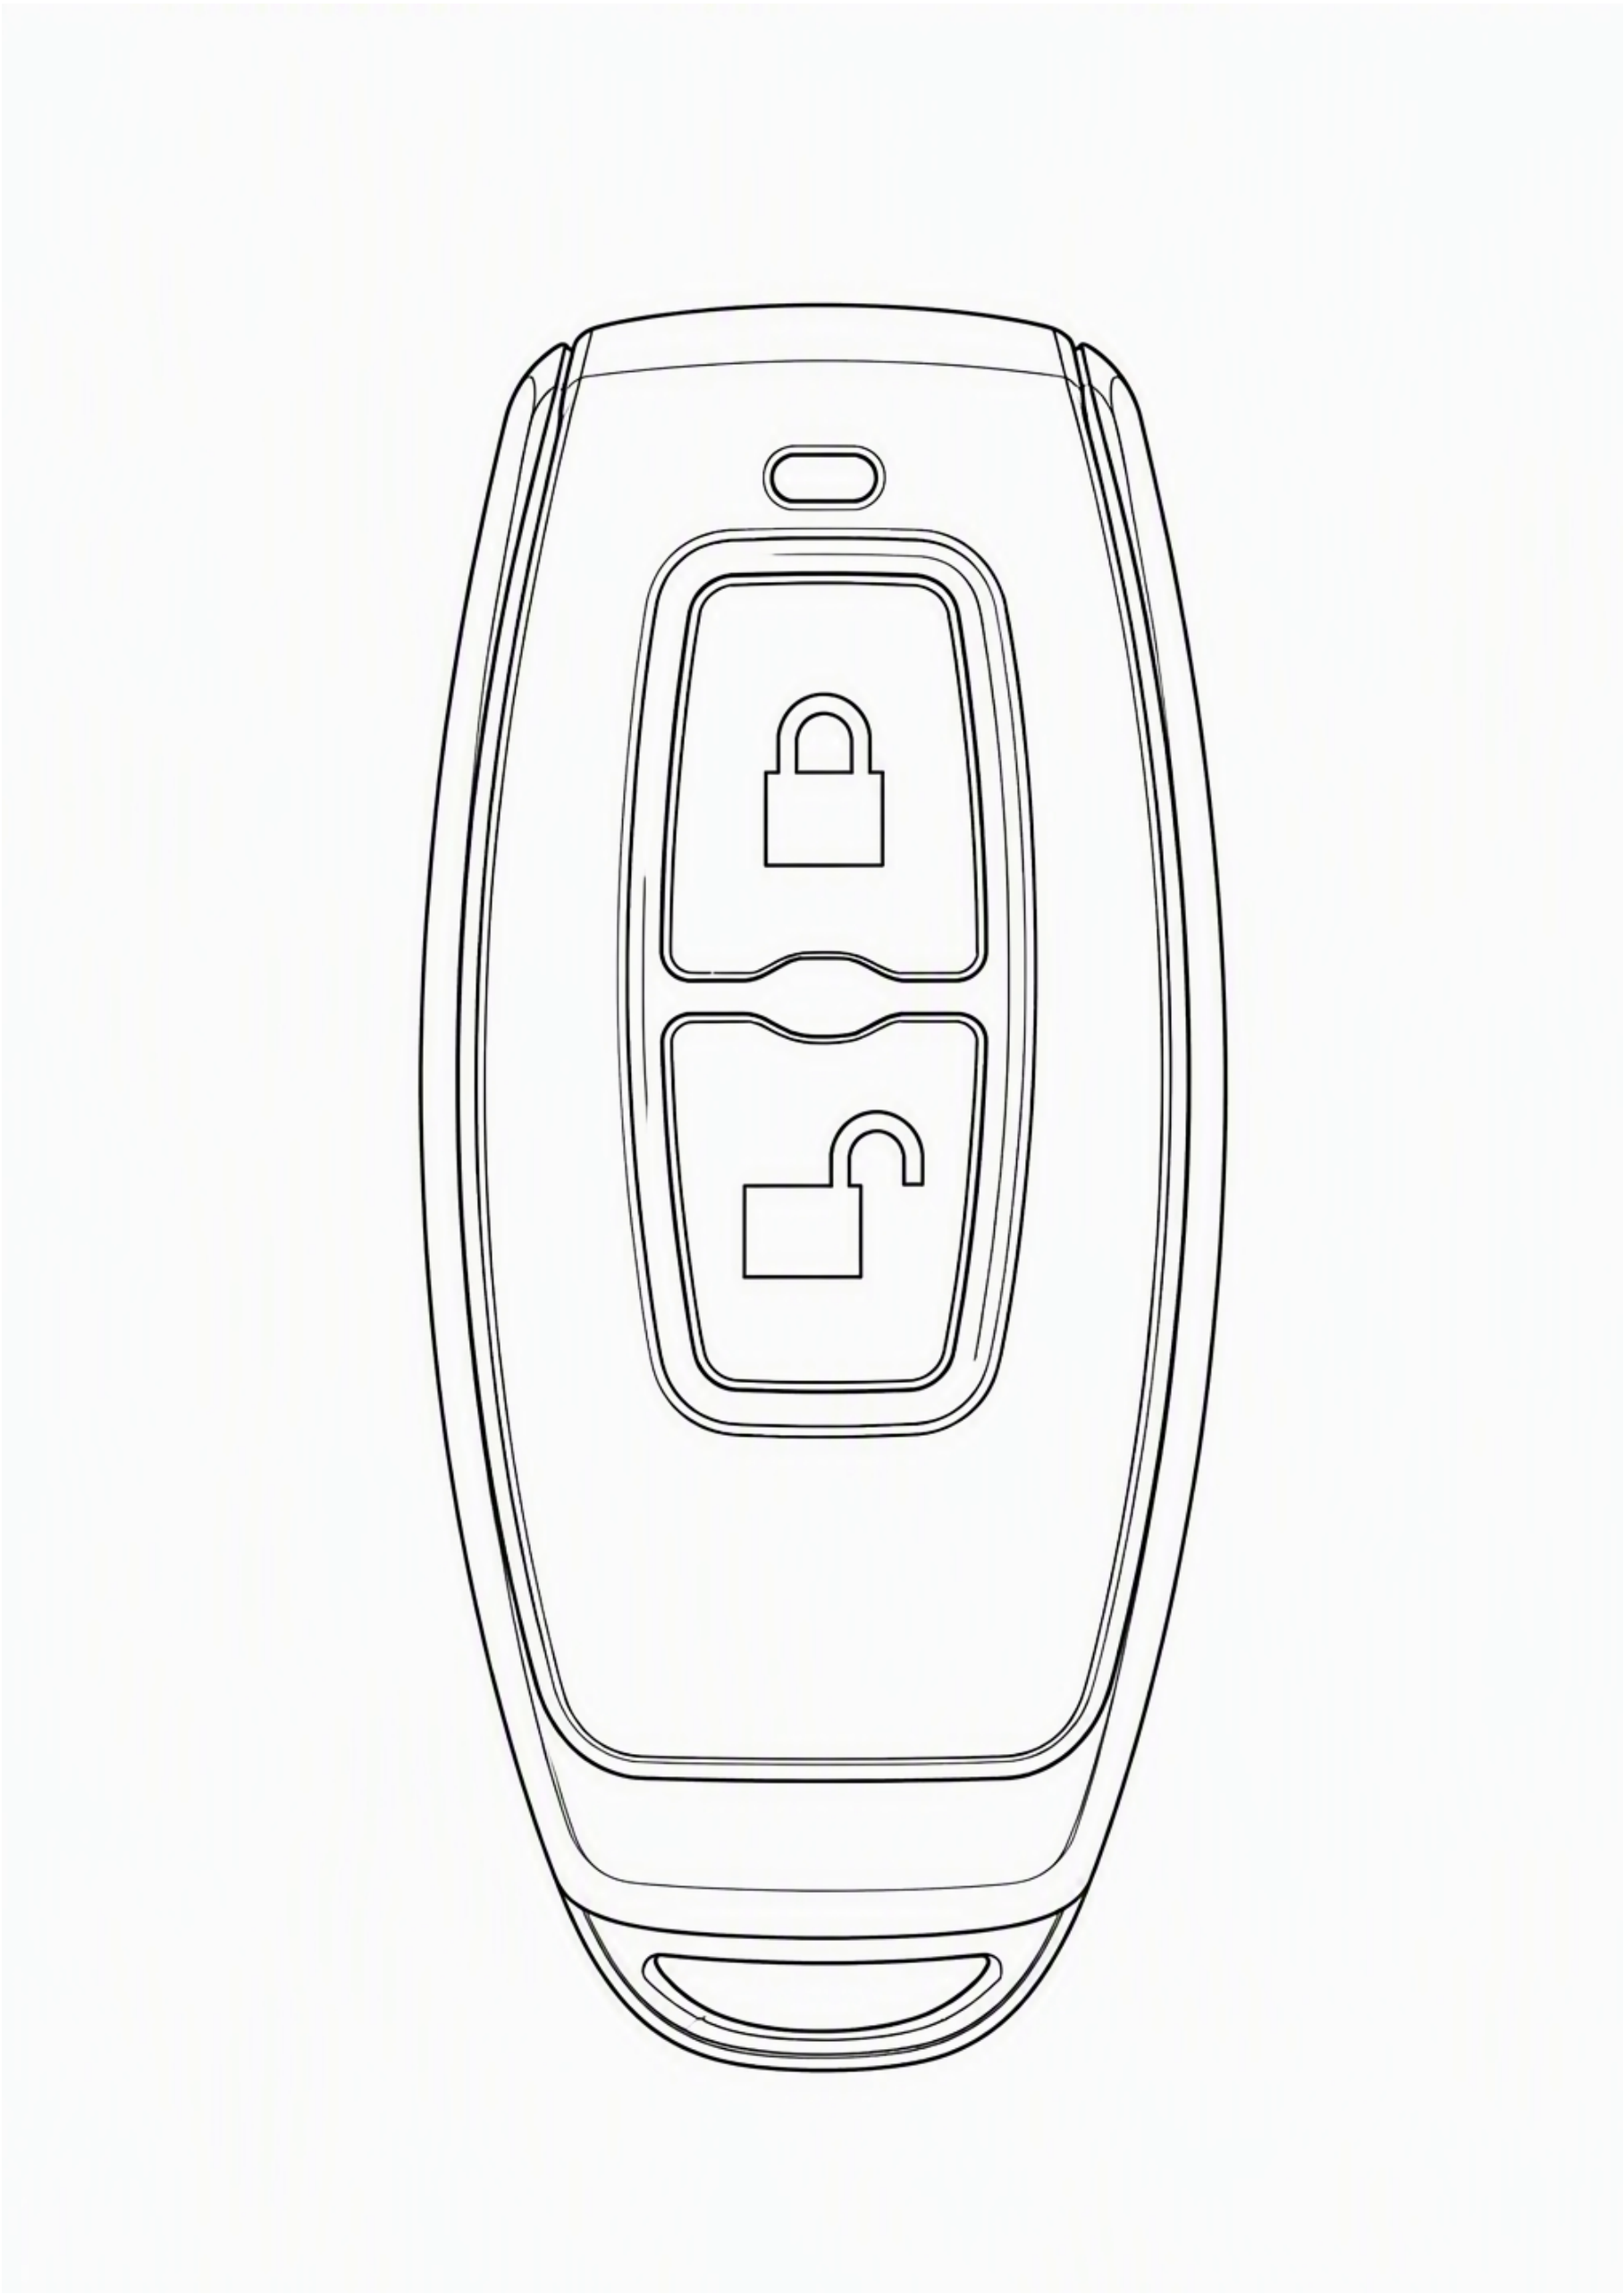


Table of Contents


Button & Indicator Light Status	1
Pairing with the Lock	2
View Remote Info	3
Delete Remote Fob	4
Battery Replacement	5

Button & Indicator Light Status


1

Unlock	Short-press the unlock button to unlock; the status light flashes simultaneously.
Lock	Short-press the lock button to lock; the status light flashes simultaneously.
Low battery	The indicator light flashes slowly when unlocking or locking.


- 1 Tap the lock to be paired.
- 2 Tap “Remote”.
- 3 Tap “Add Remote”.
- 4 Select “Timed / Permanent / Recurring”, enter a name, then tap “Next”.
- 5 Tap “R1”.
- 6 Long-press the locking key on the wireless remote fob. Release after the red light flashes quickly, then tap “Next”.
- 7 Tap the “+” next to the displayed device.
- 8 Pairing succeeded. You can now lock and unlock with the wireless remote fob.

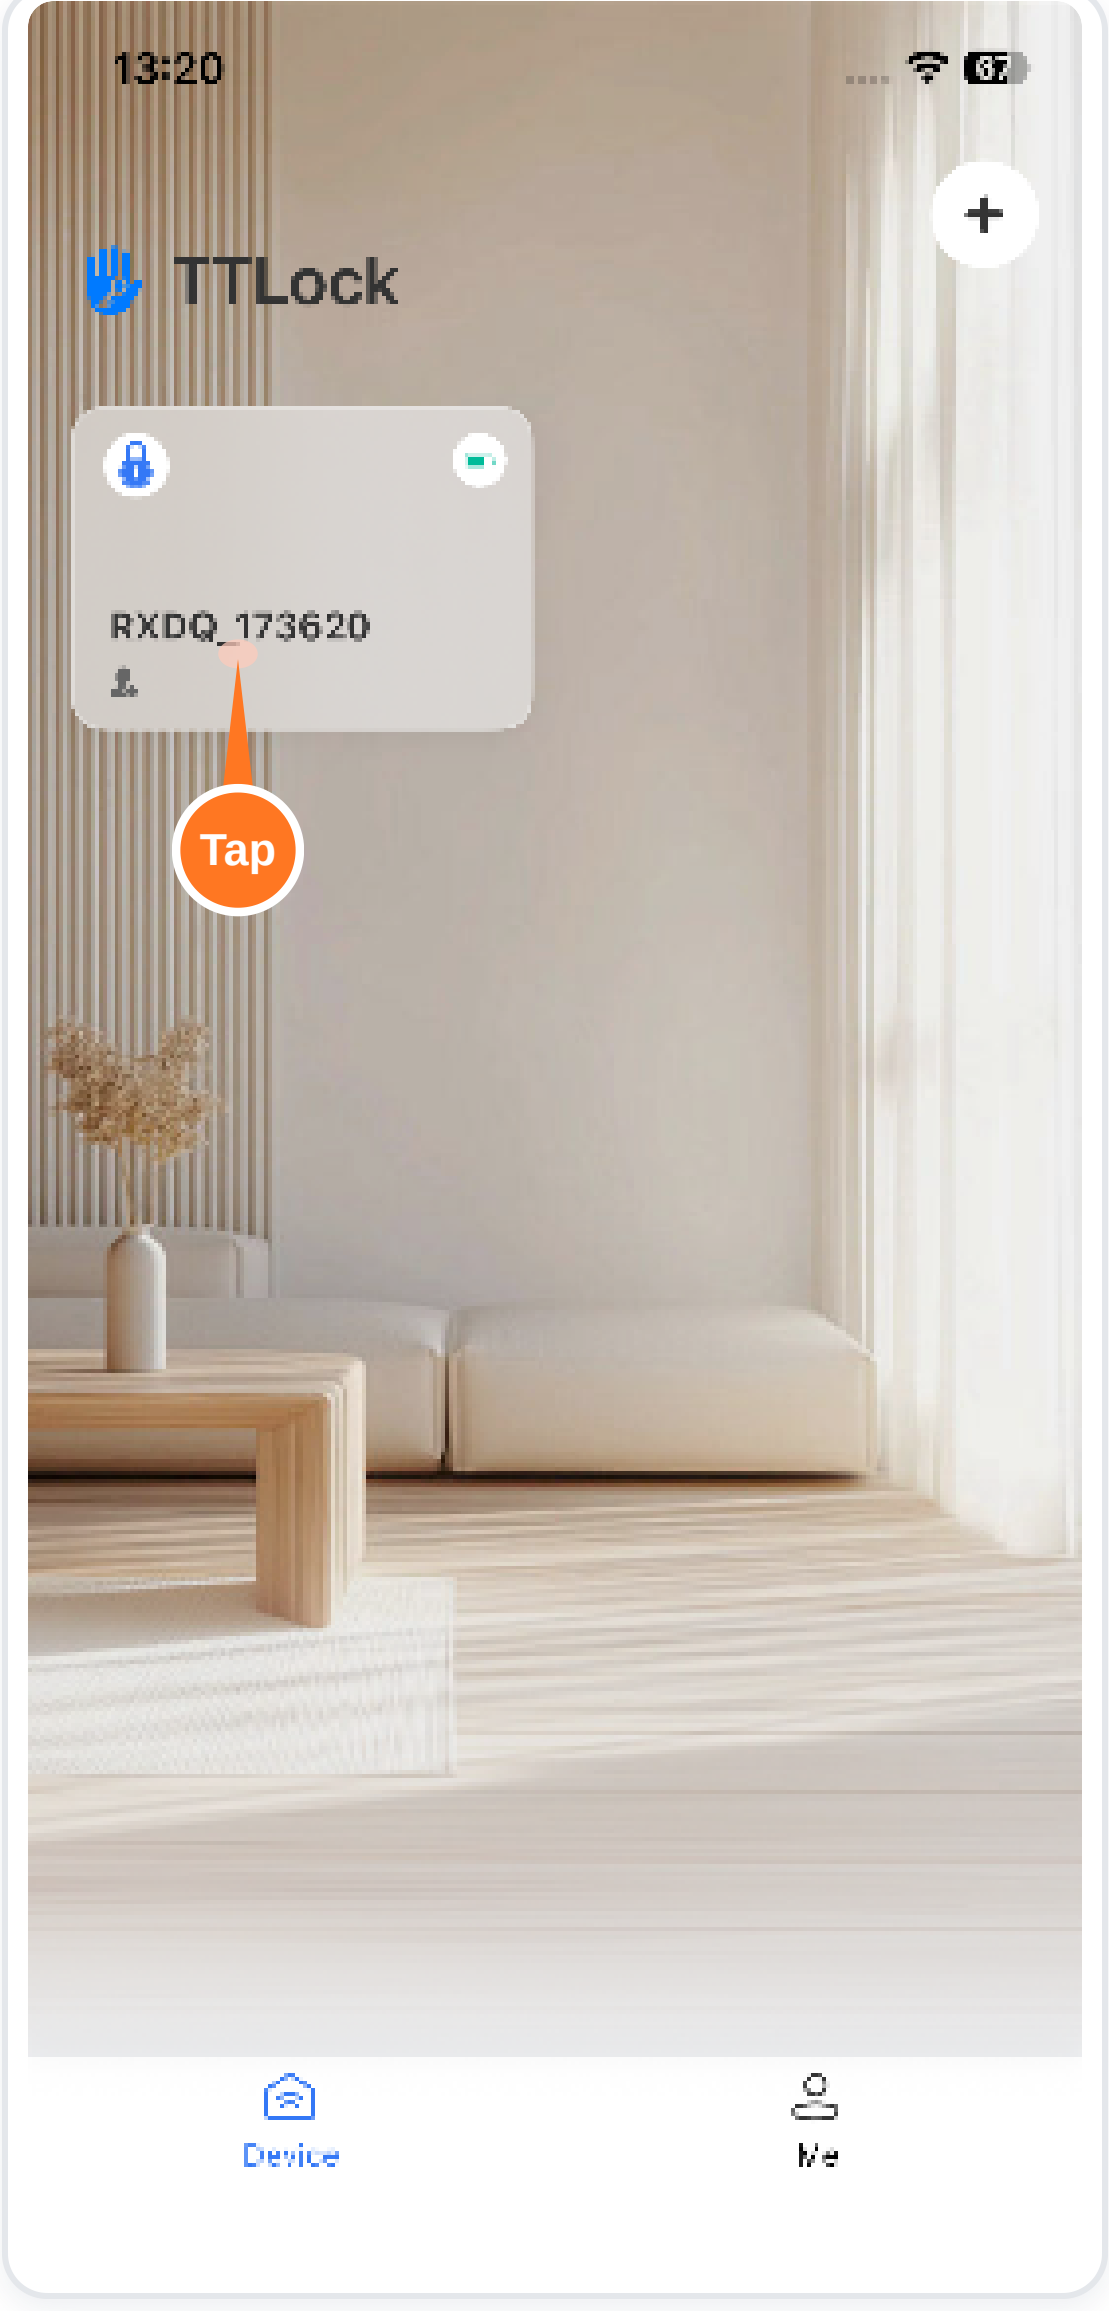


1 Tap the lock to be paired.

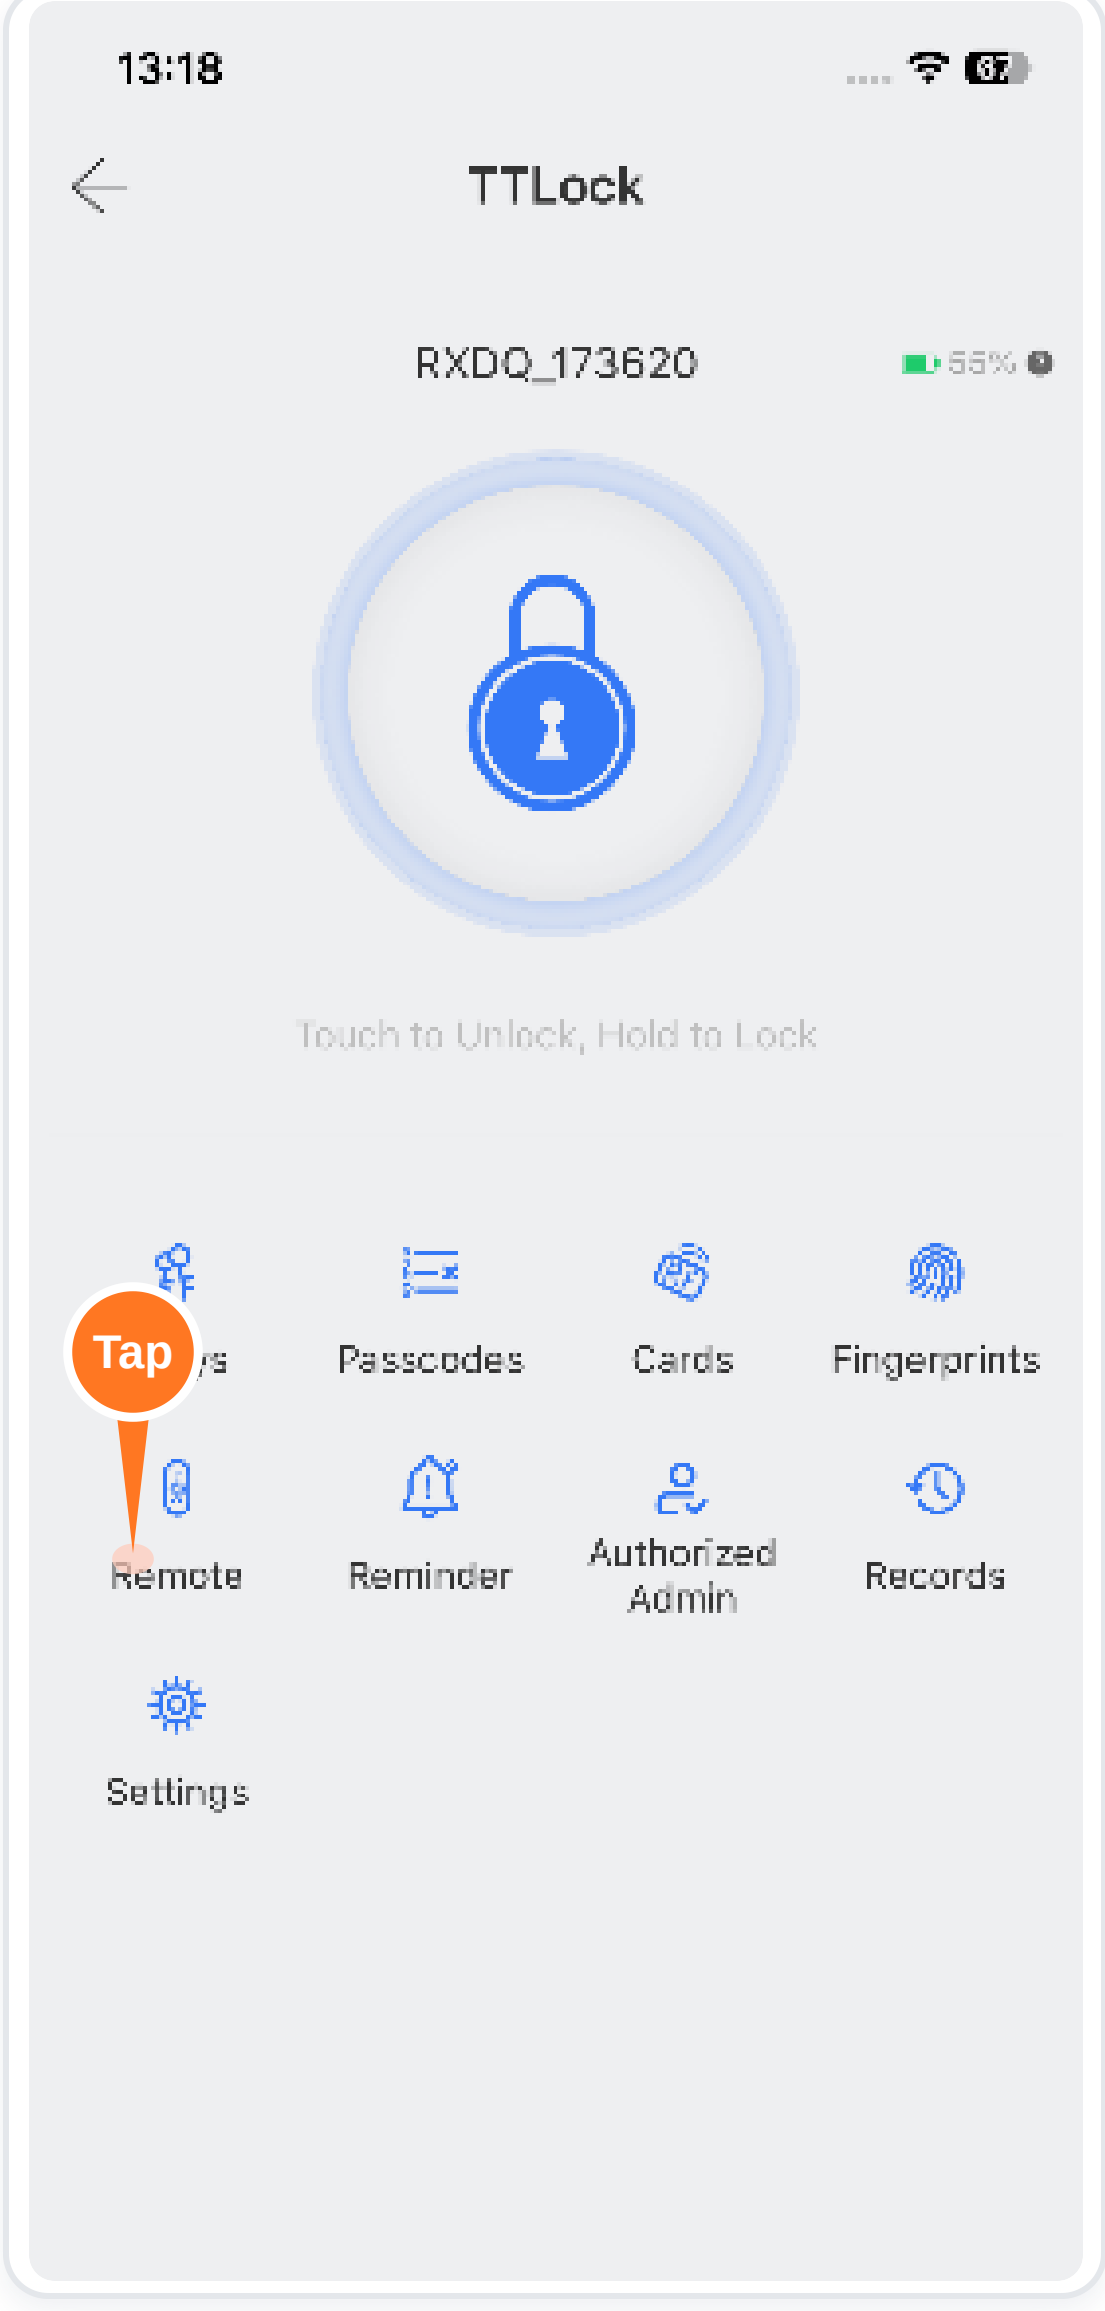


2 Tap “Remote”.

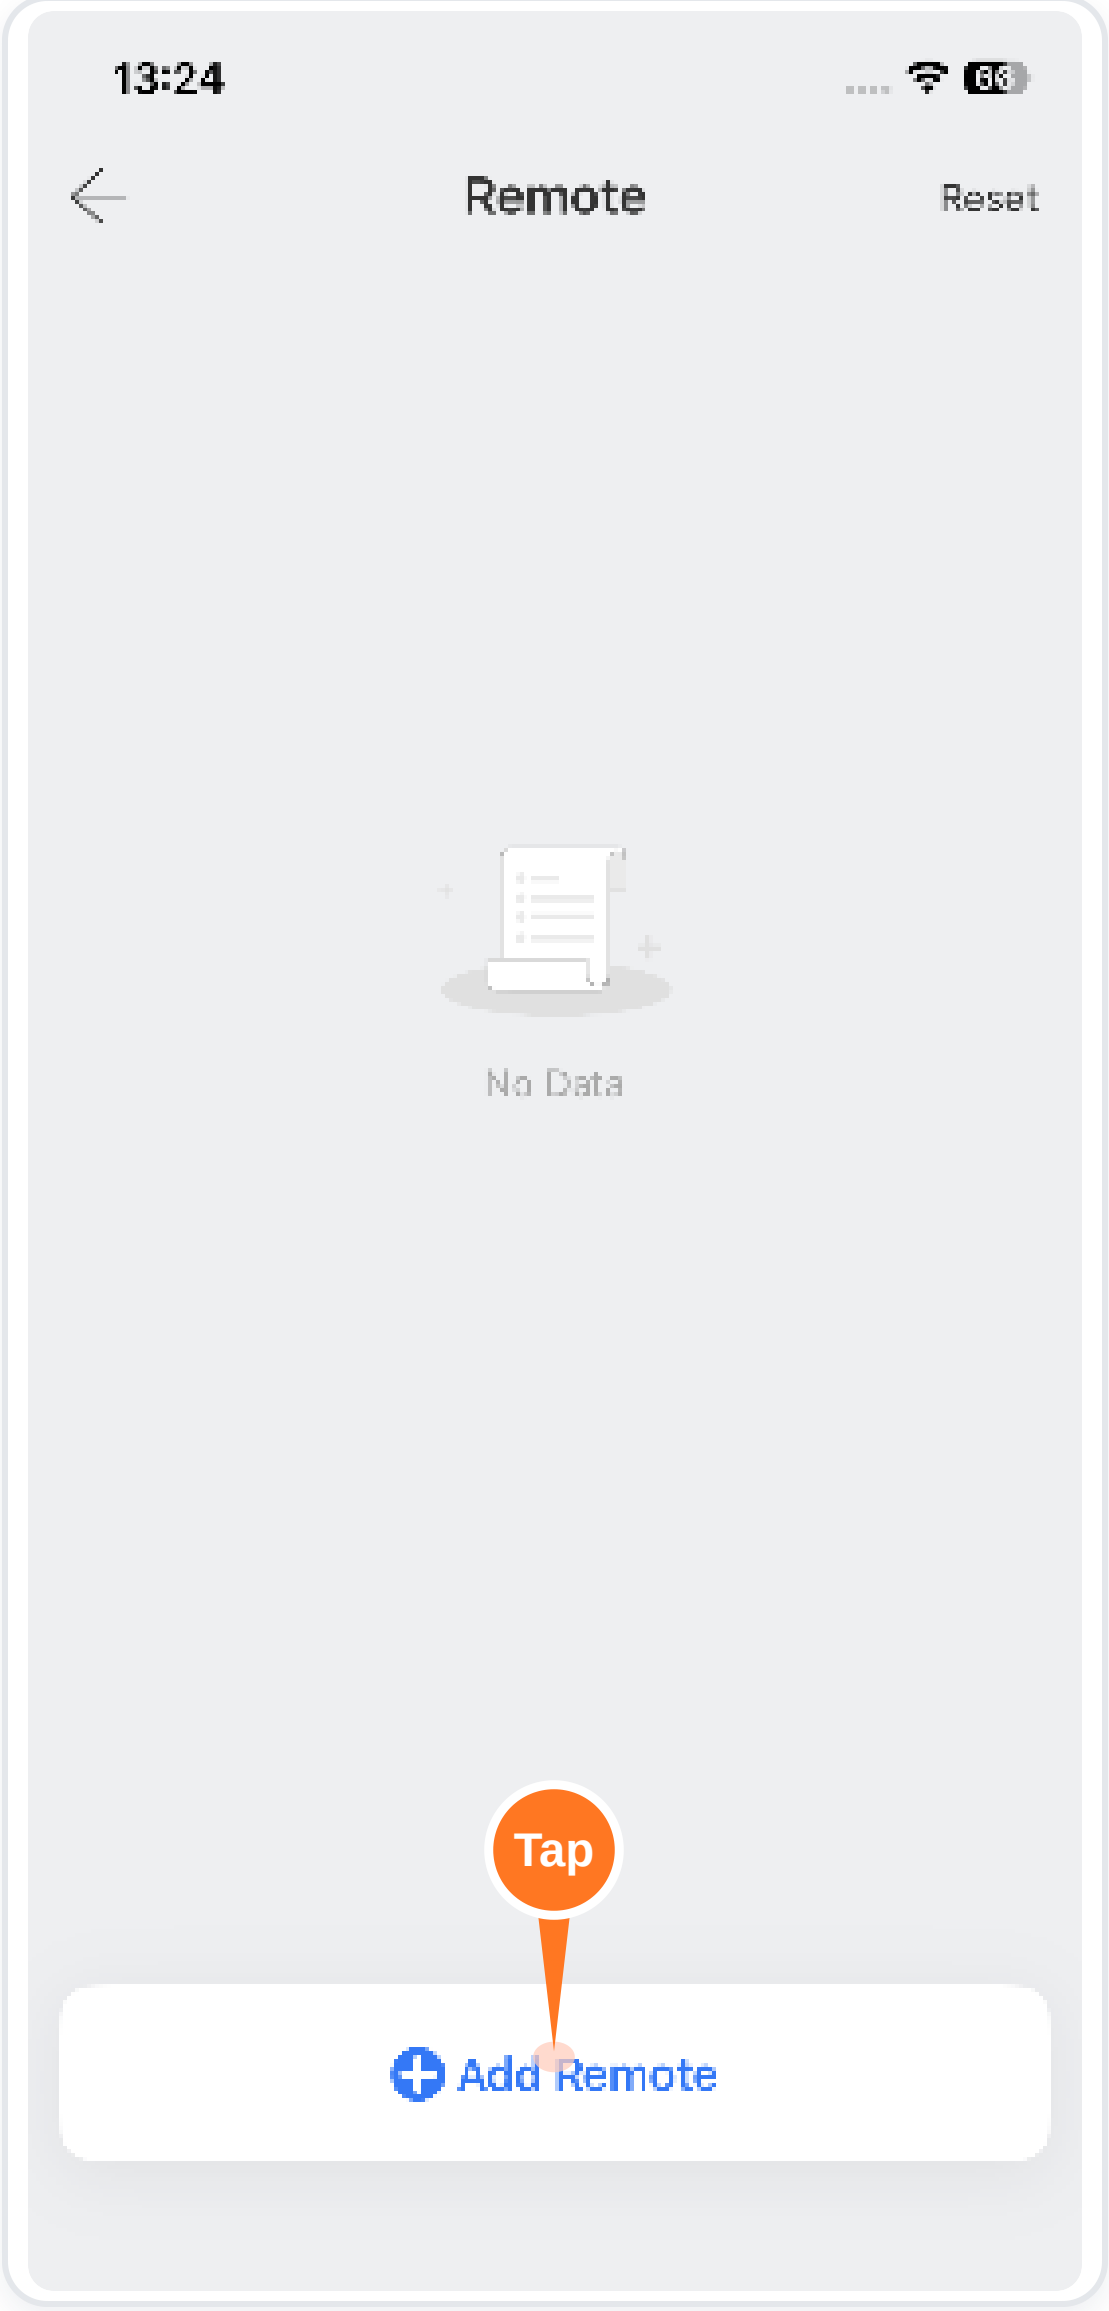


3 Tap “Add Remote”.

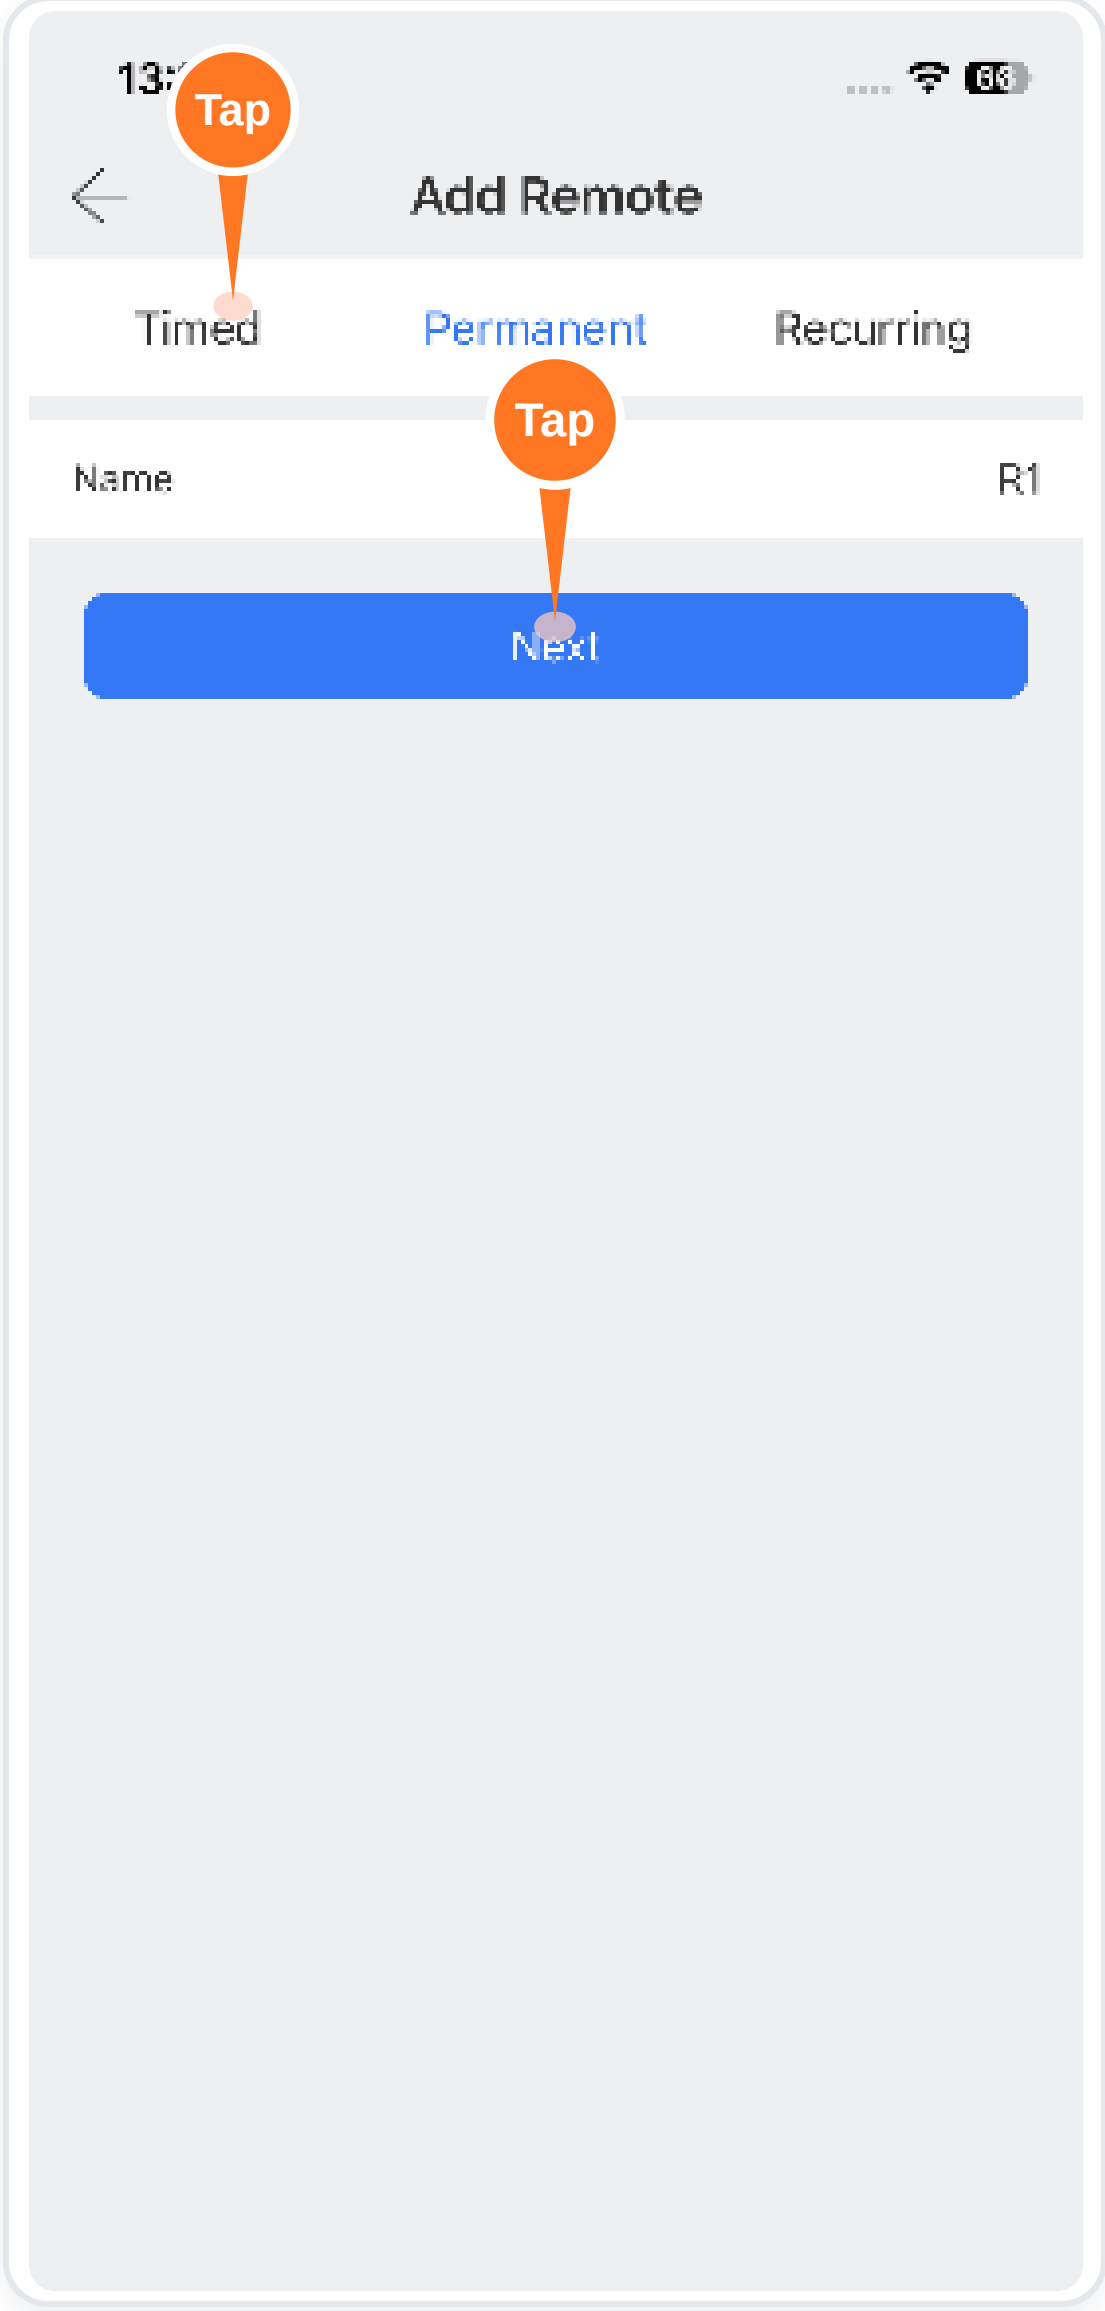


4 Select the validity type, then tap “Next”.

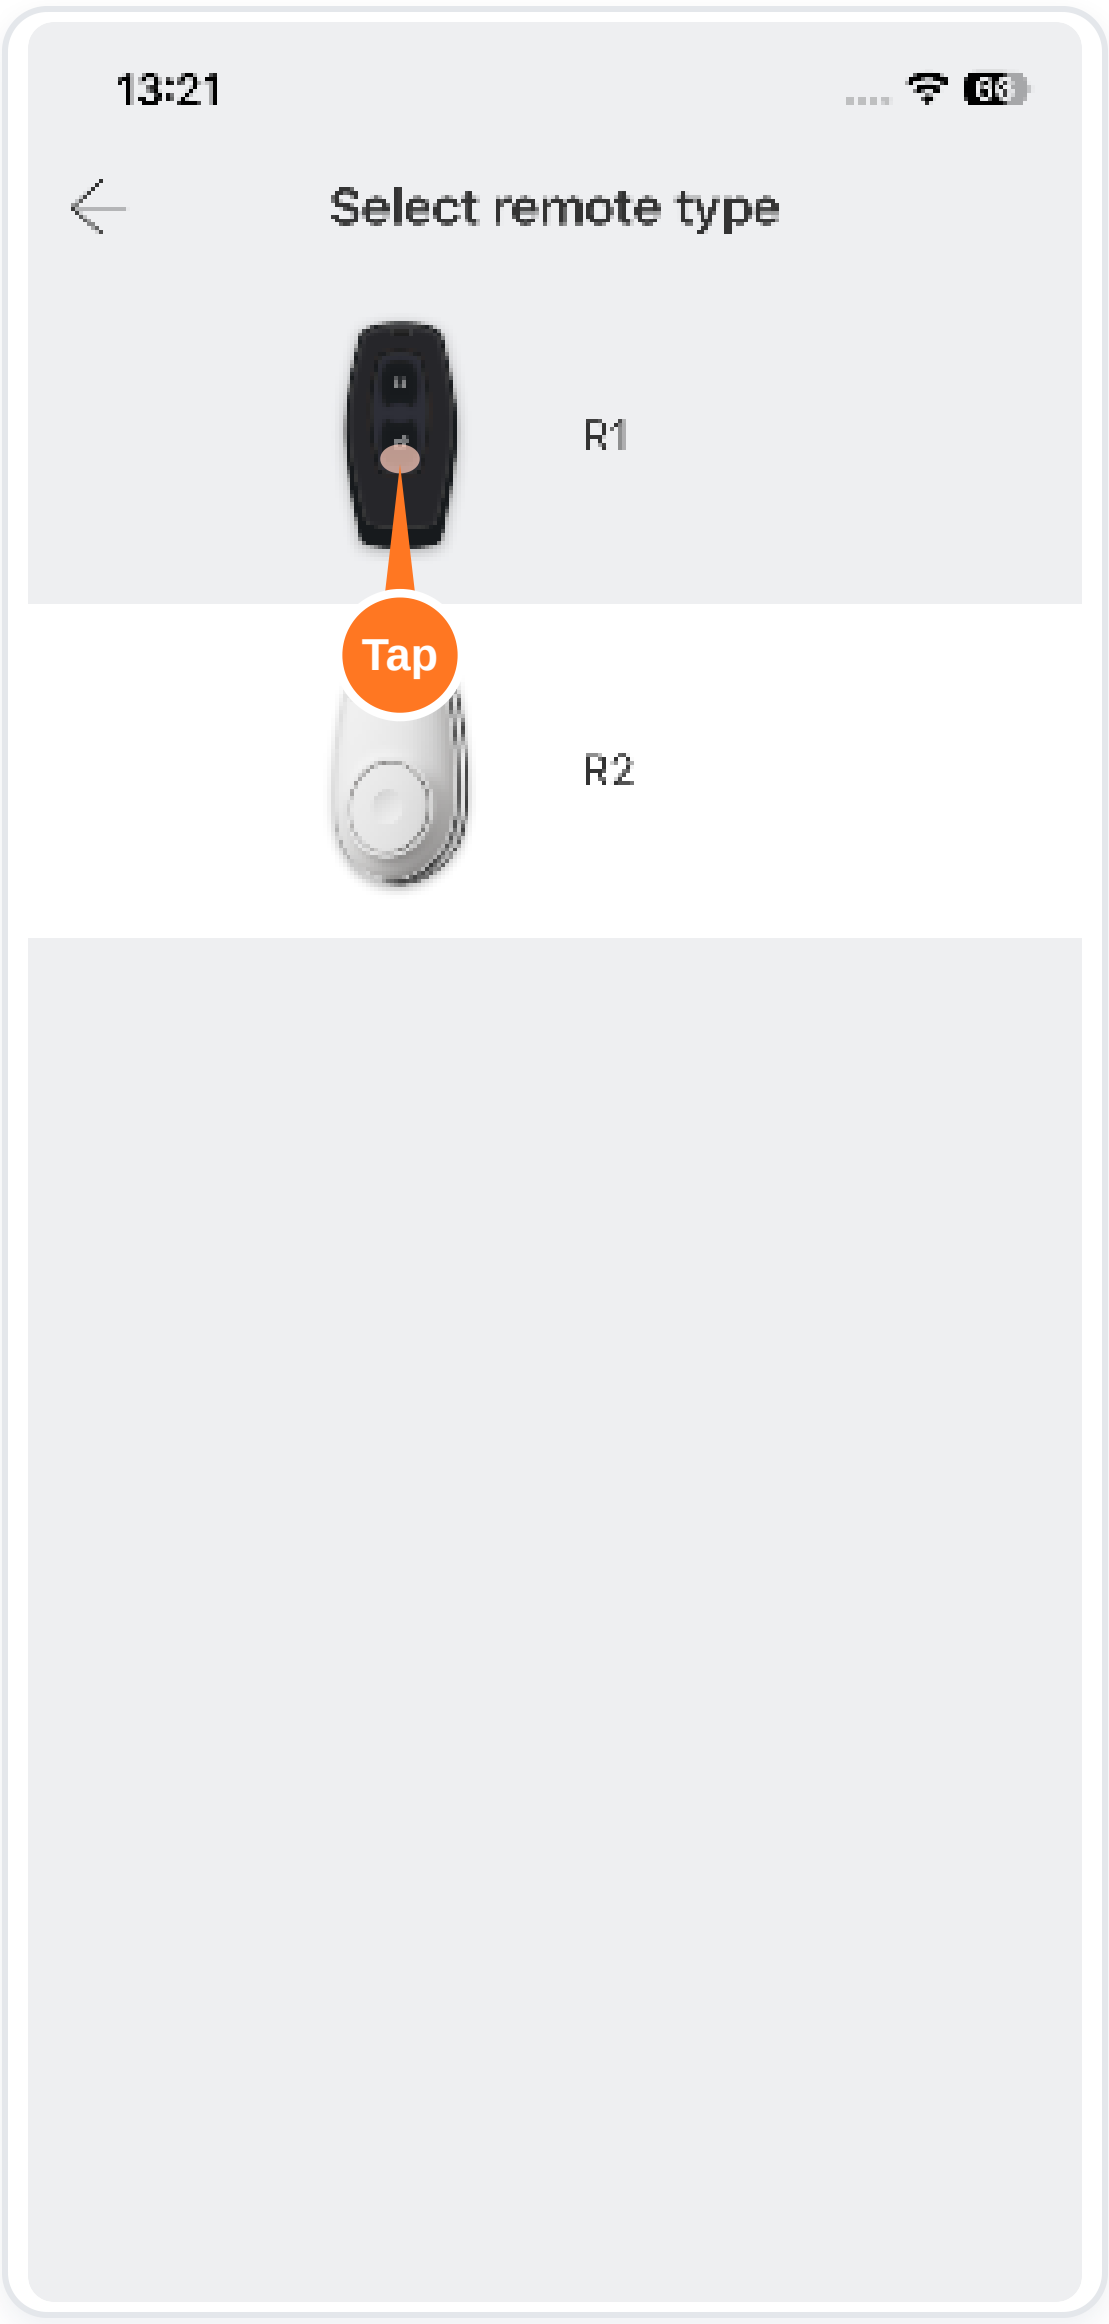


5 Tap “R1”.

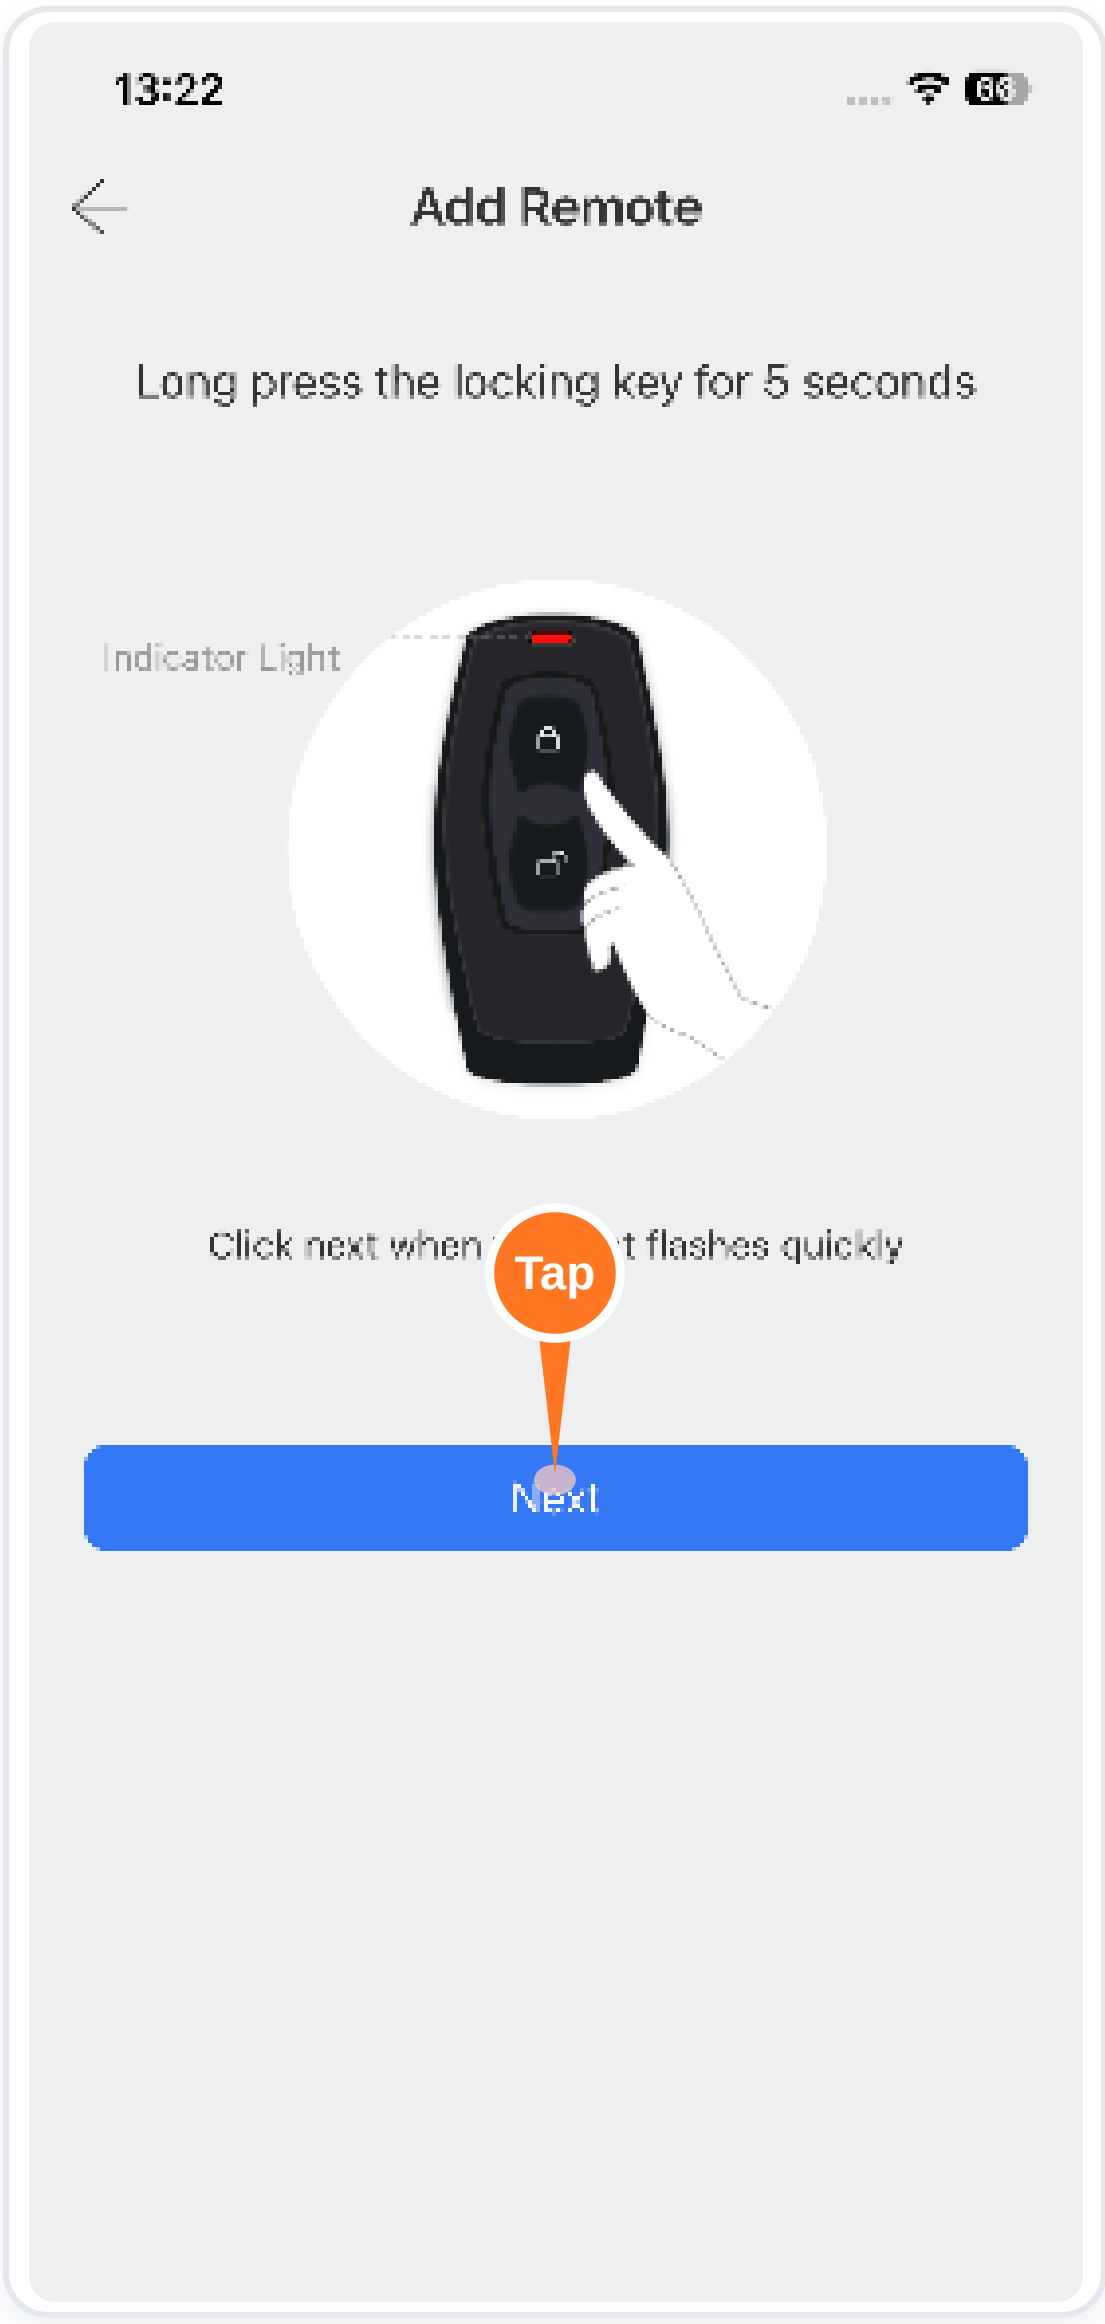

6 Long-press the locking key, then tap “Next”.

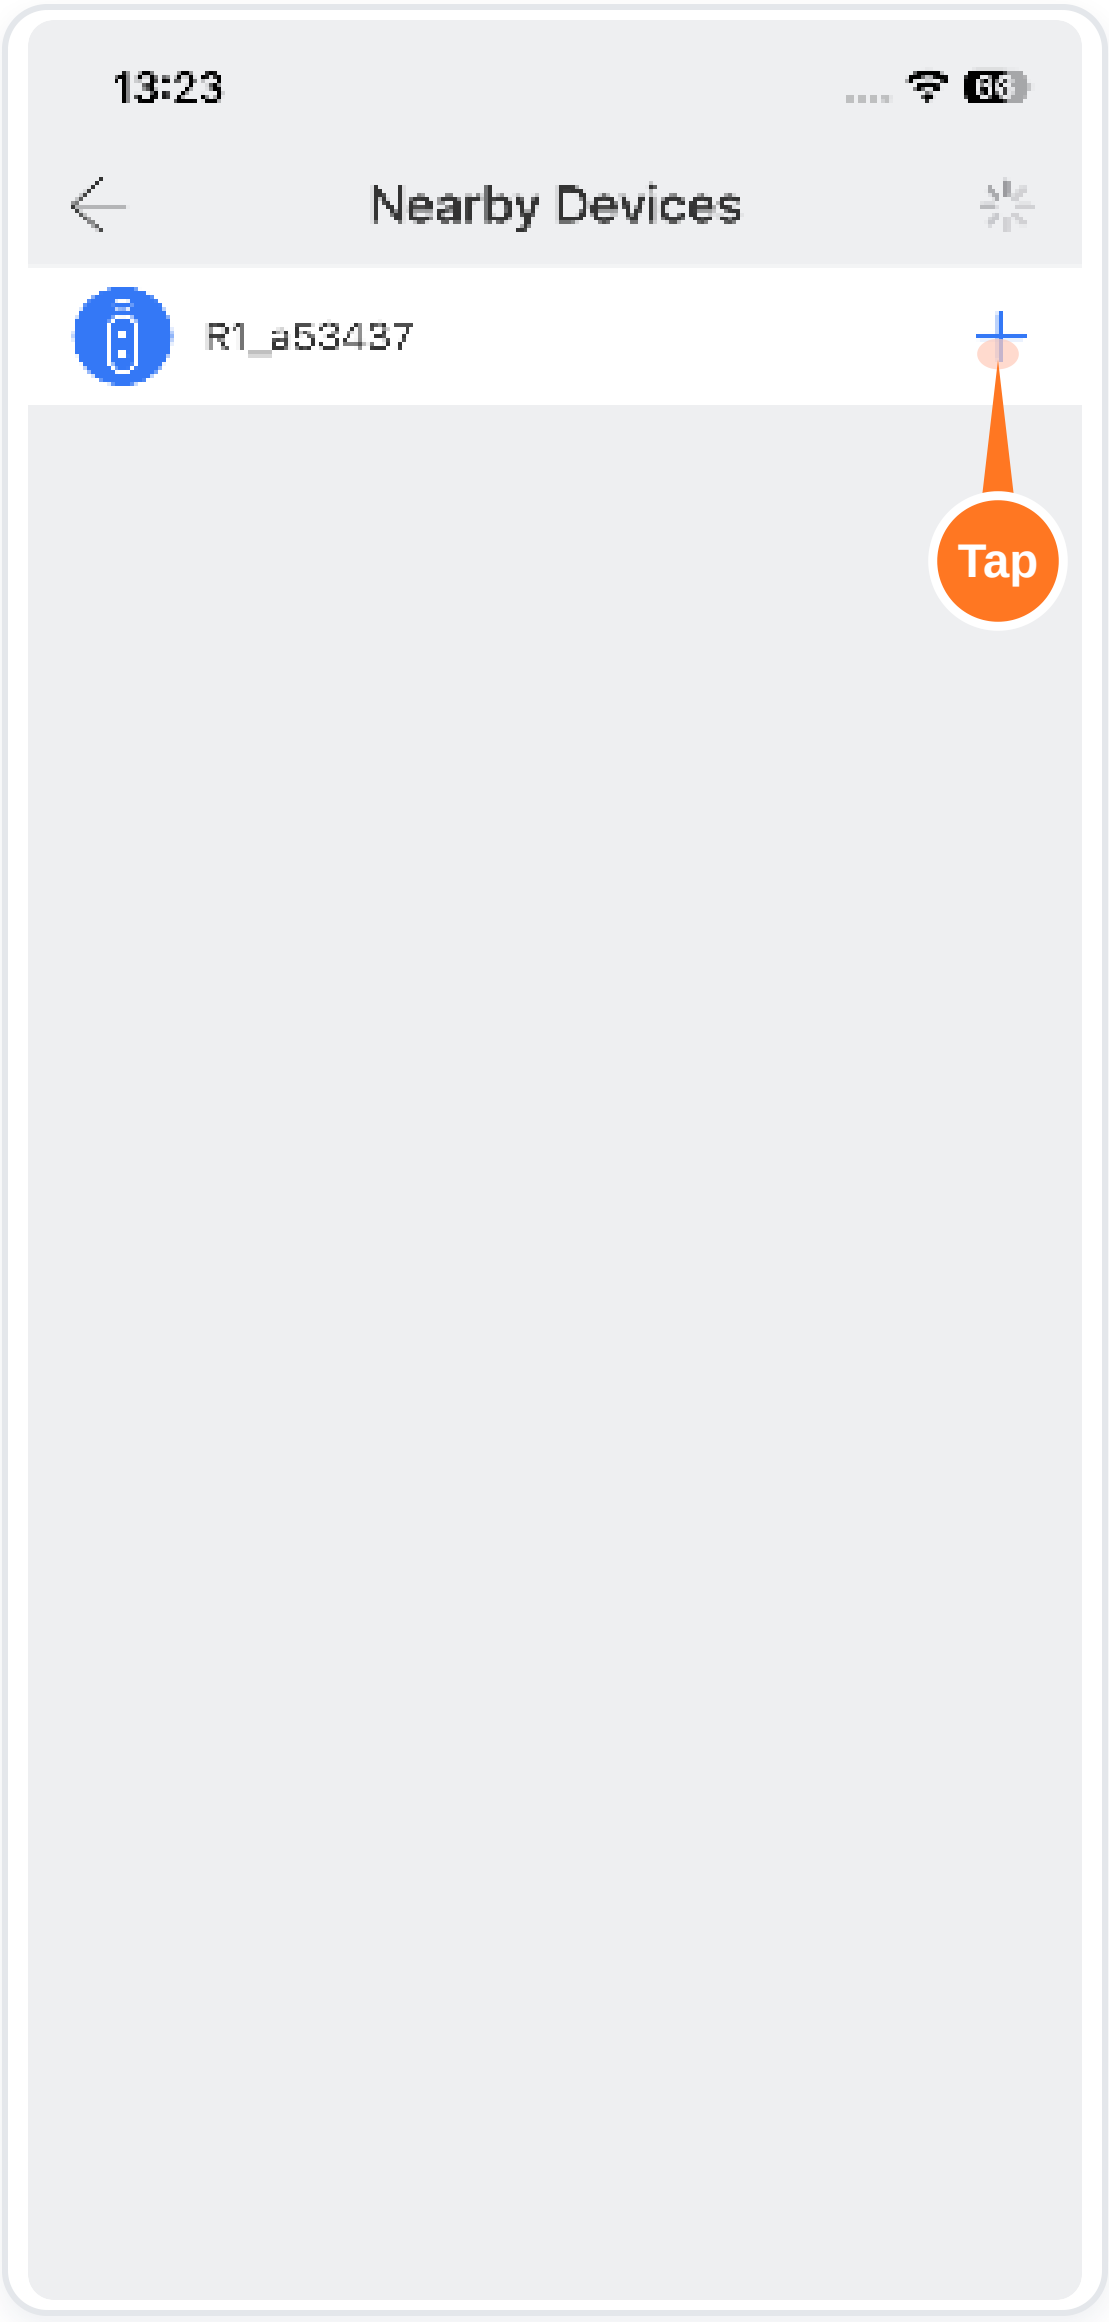

7 Tap the “+” next to the device.

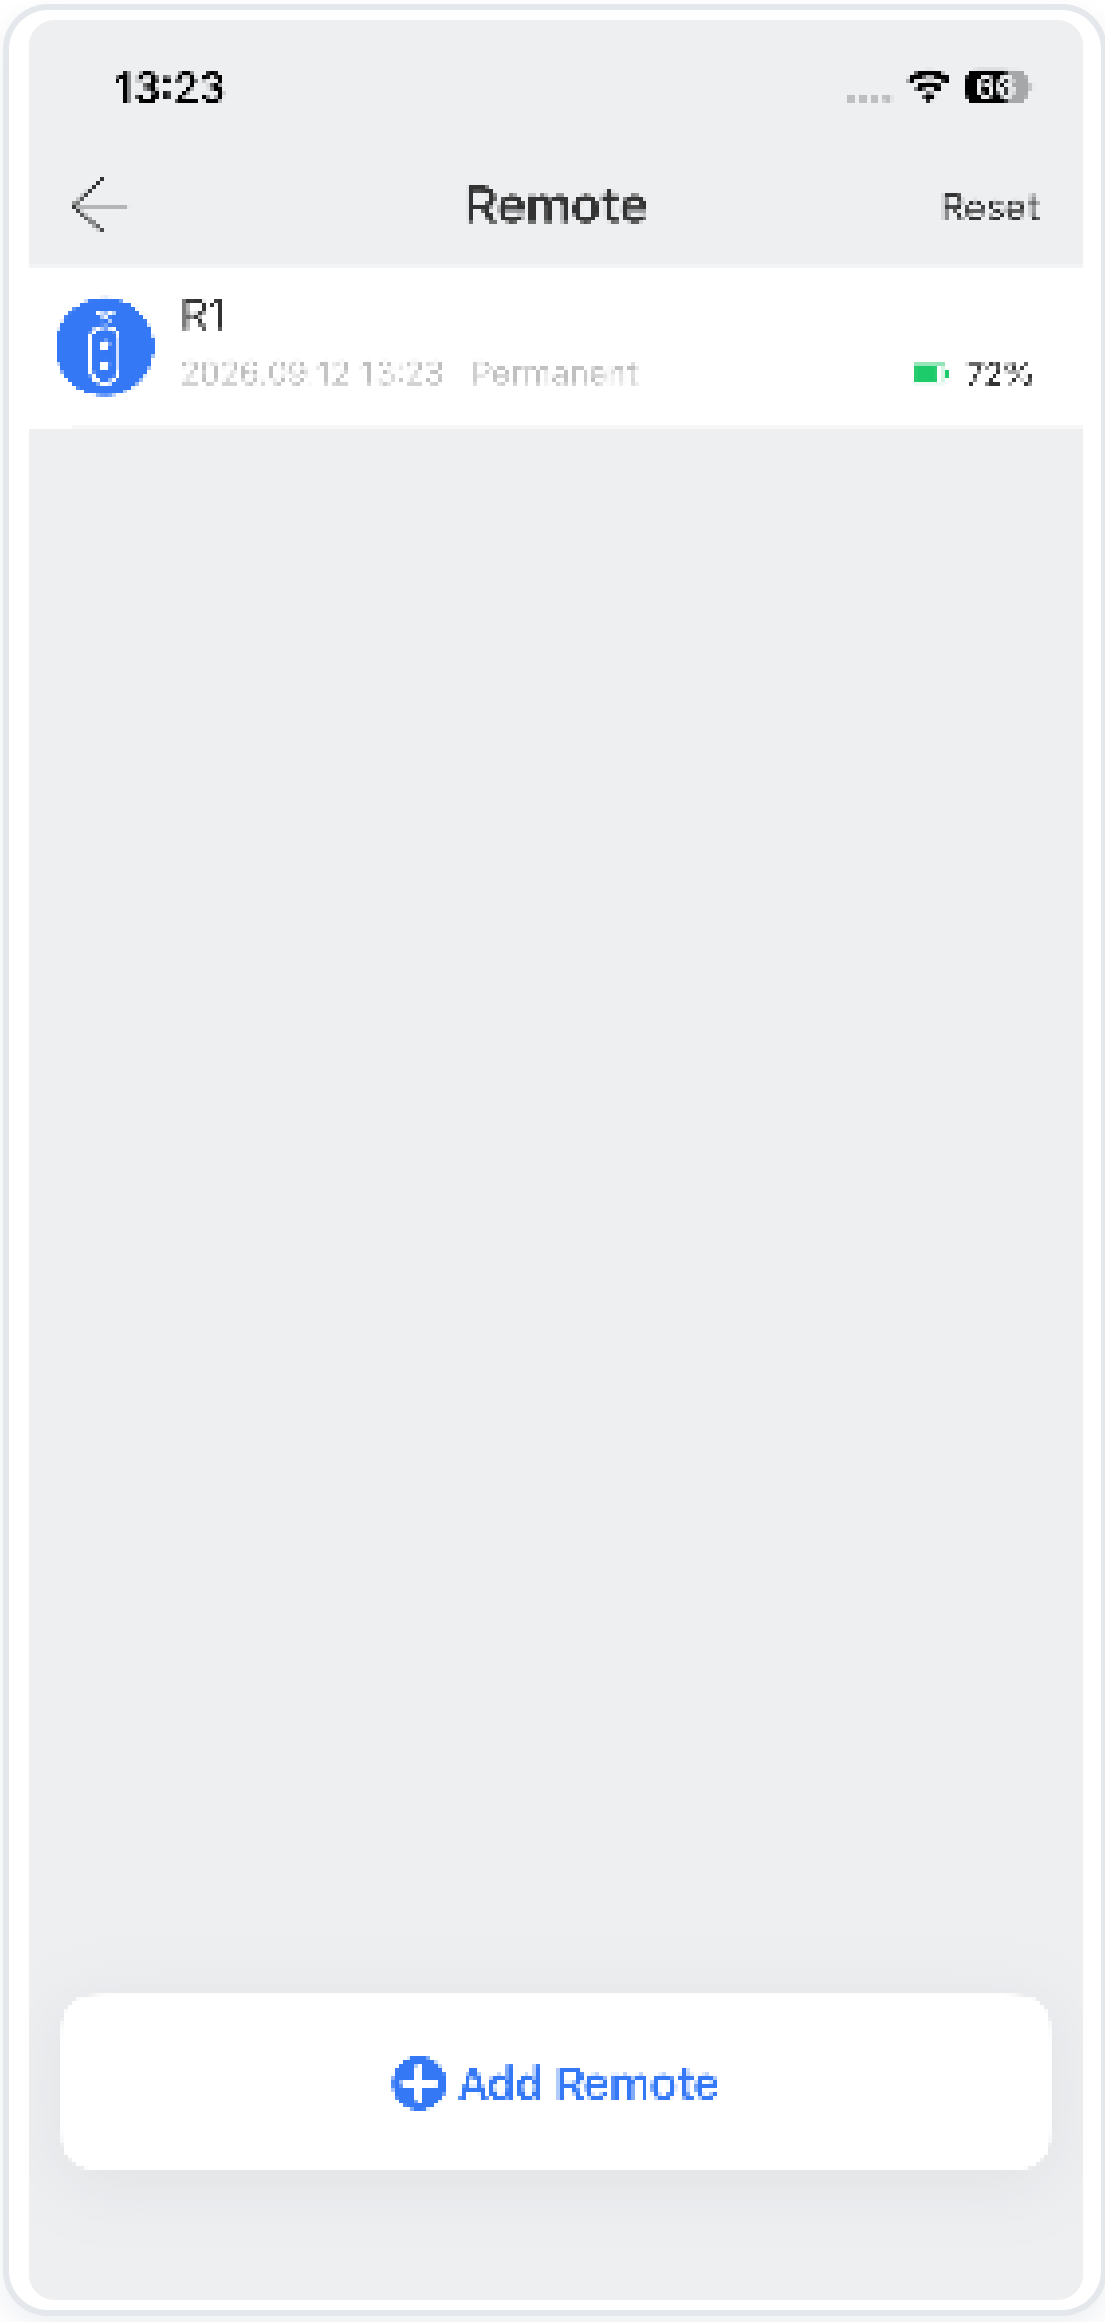


8 Pairing succeeded.


View Remote Info

3

- 1 Tap the target device to view the battery level and records, rename the device and set its validity period.

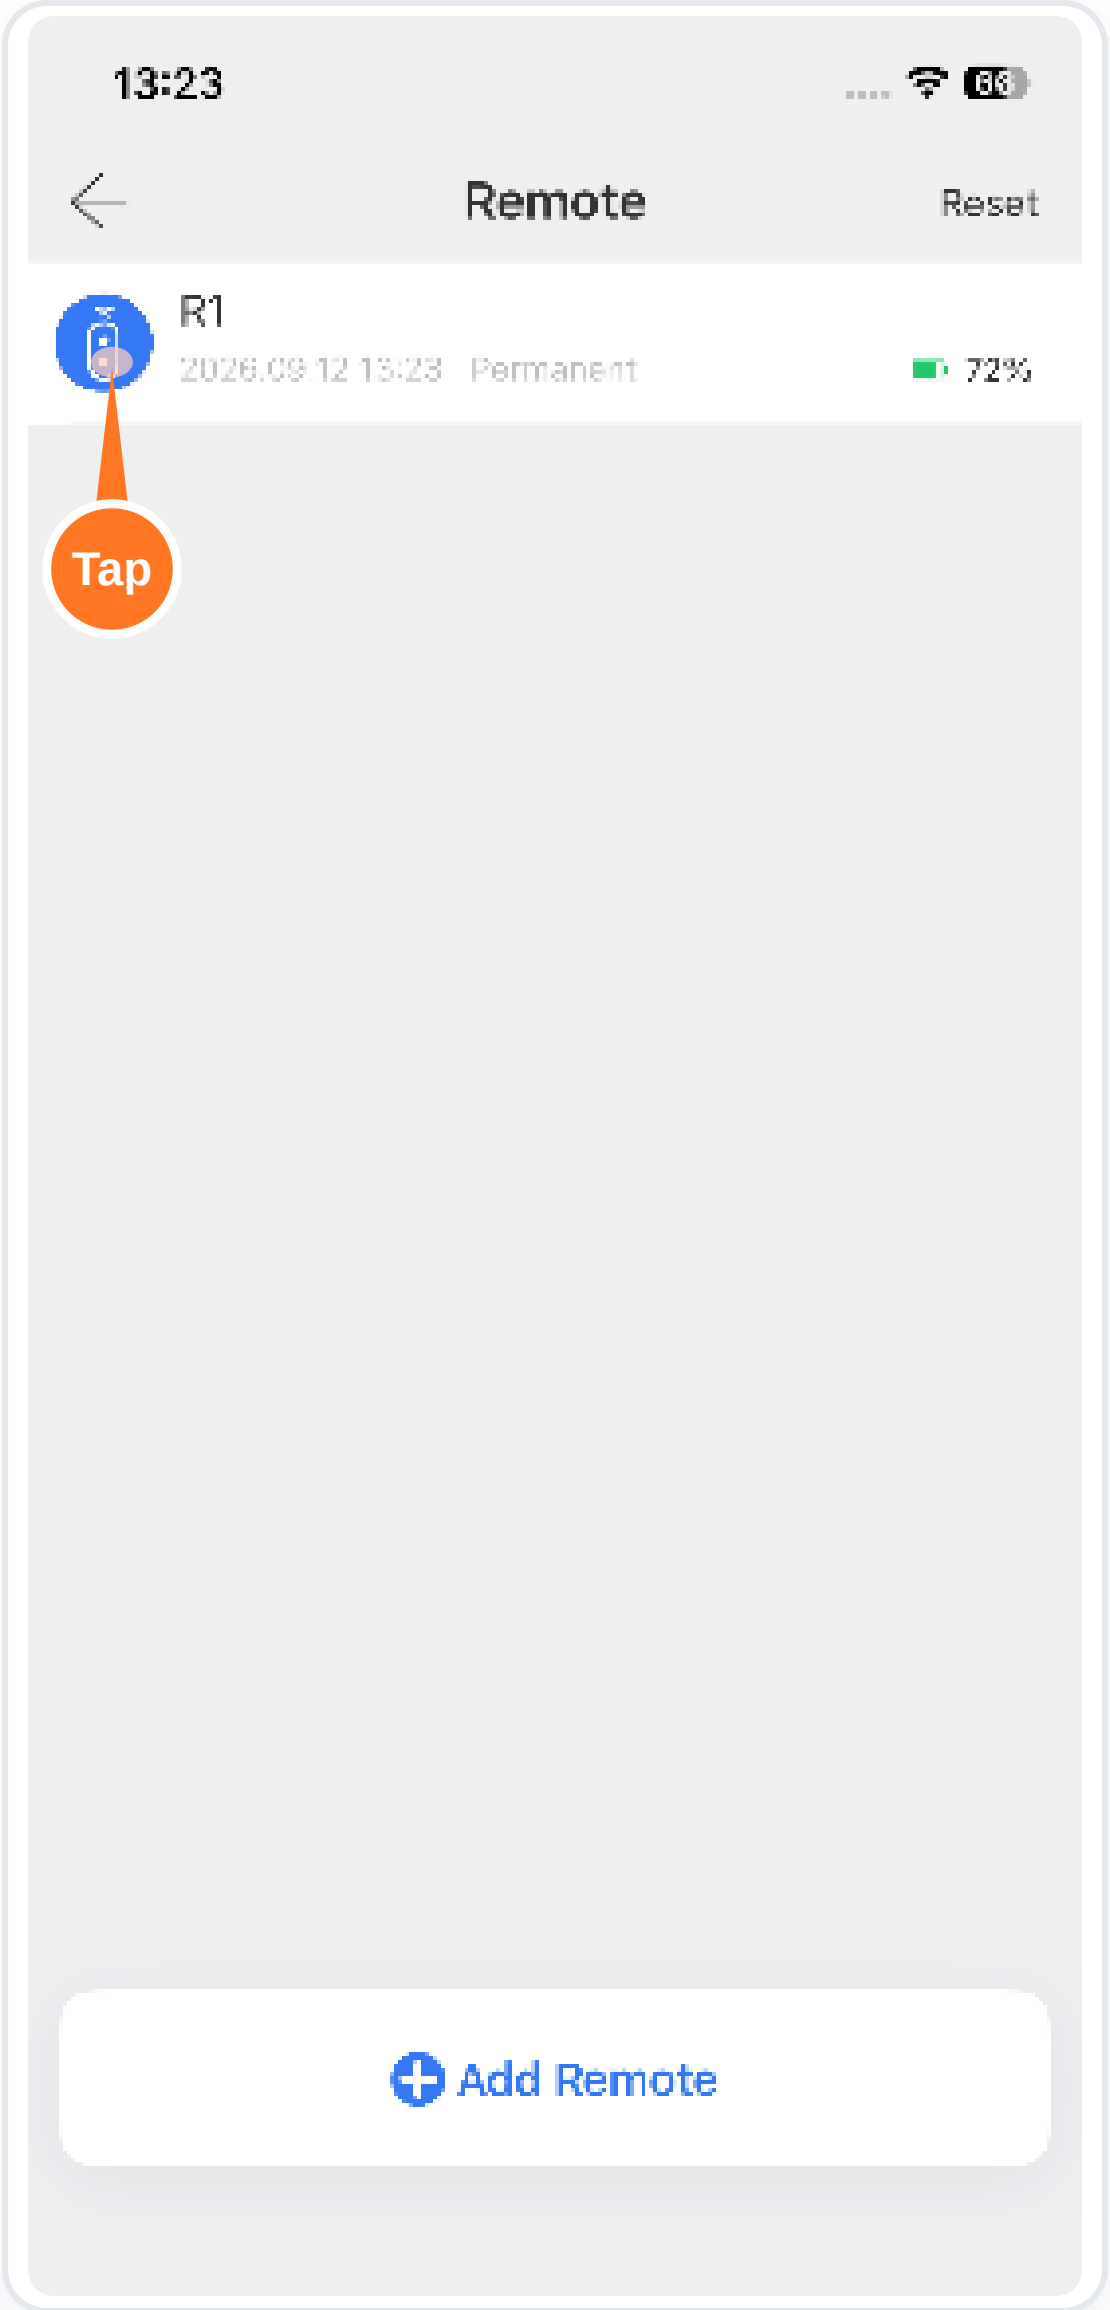

1 Tap the target remote device.

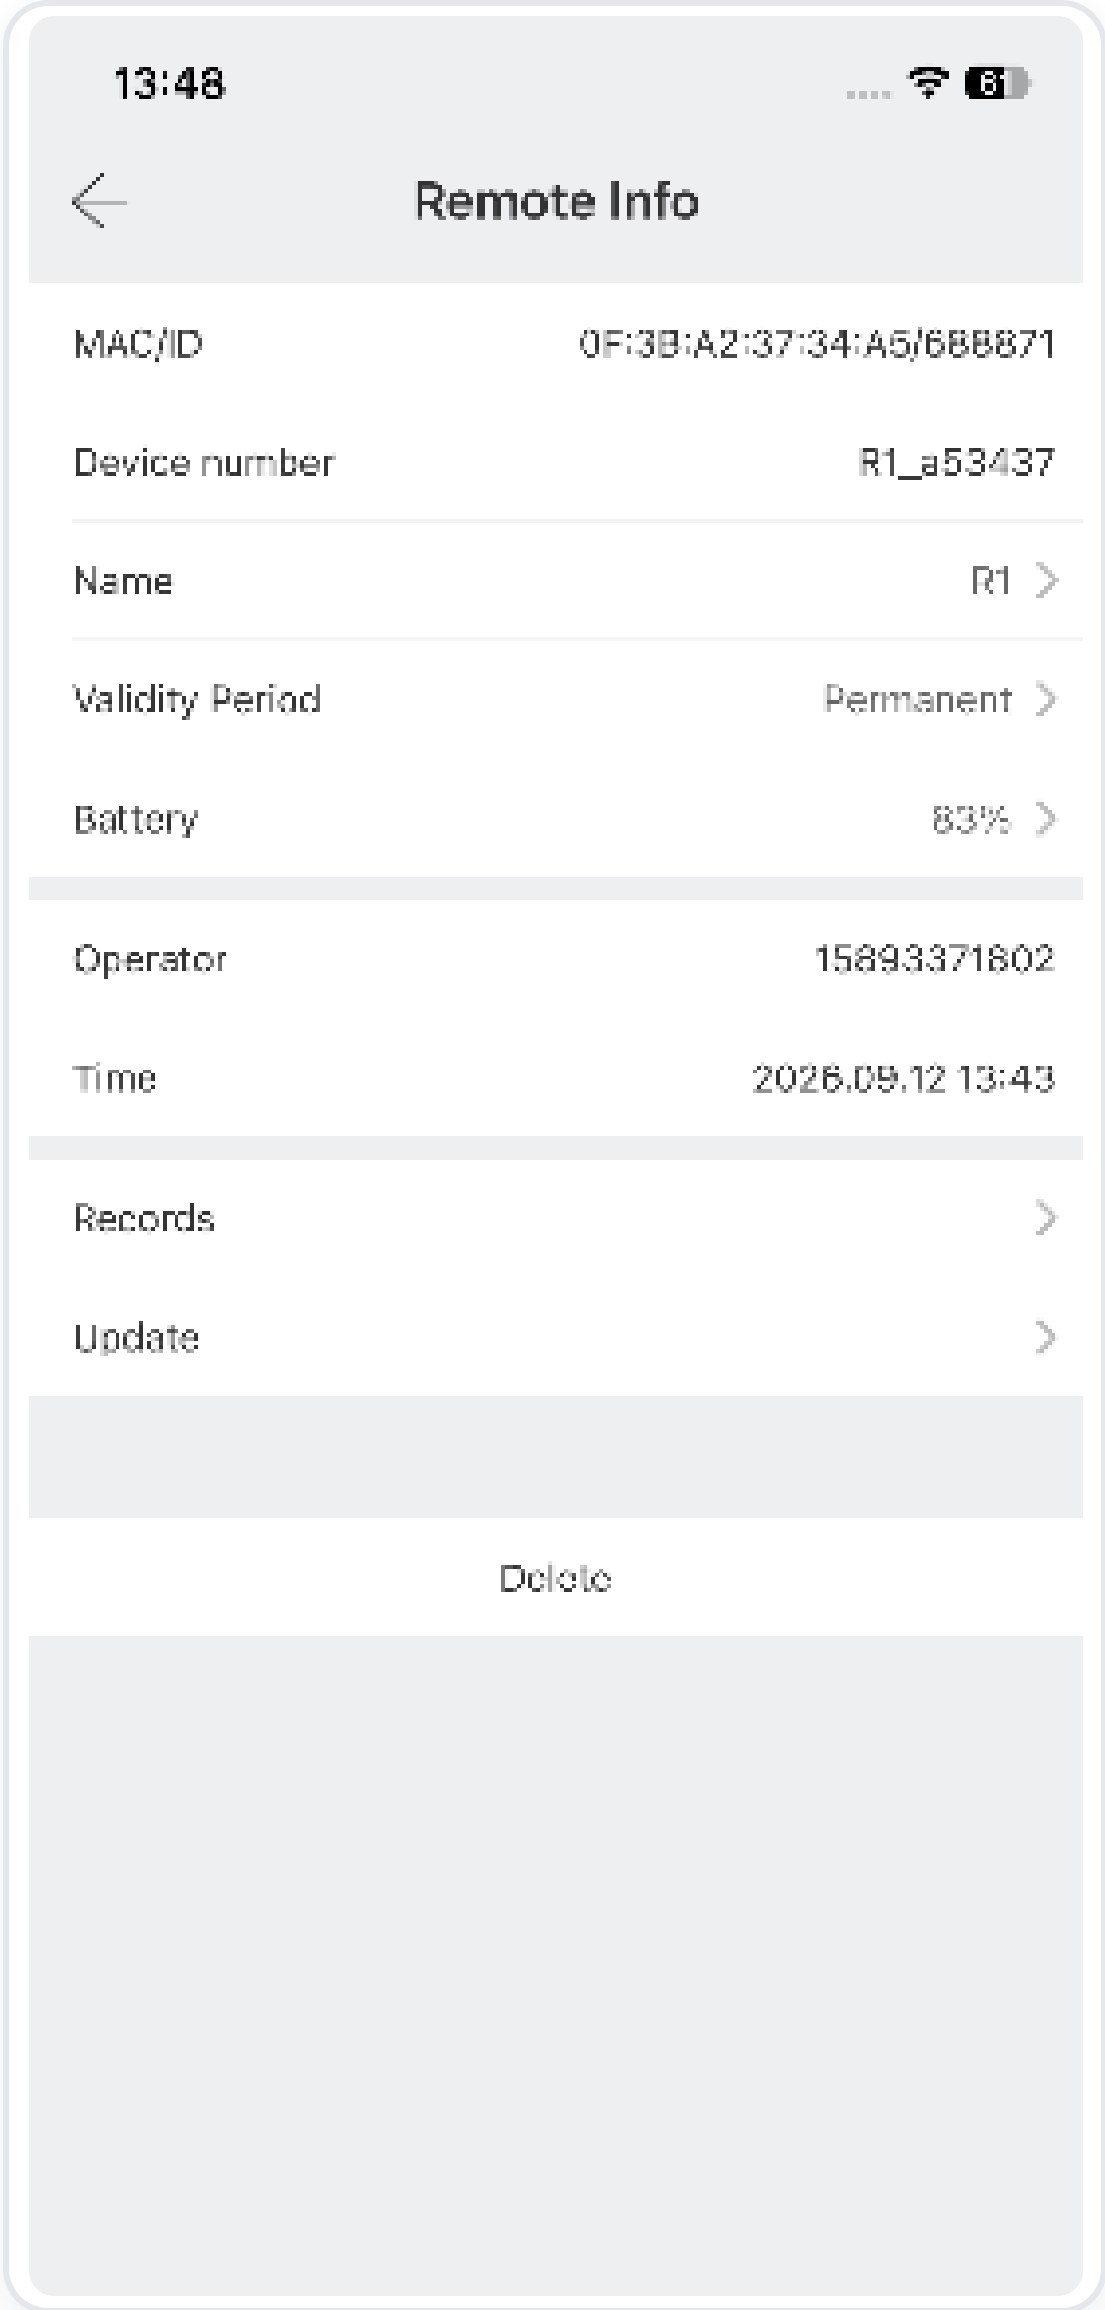


Remote info: battery, validity period, records.


Delete Remote Fob

4


- ① Tap “Remote”.
- ② Tap the wireless remote device to be deleted, then tap “Delete”.

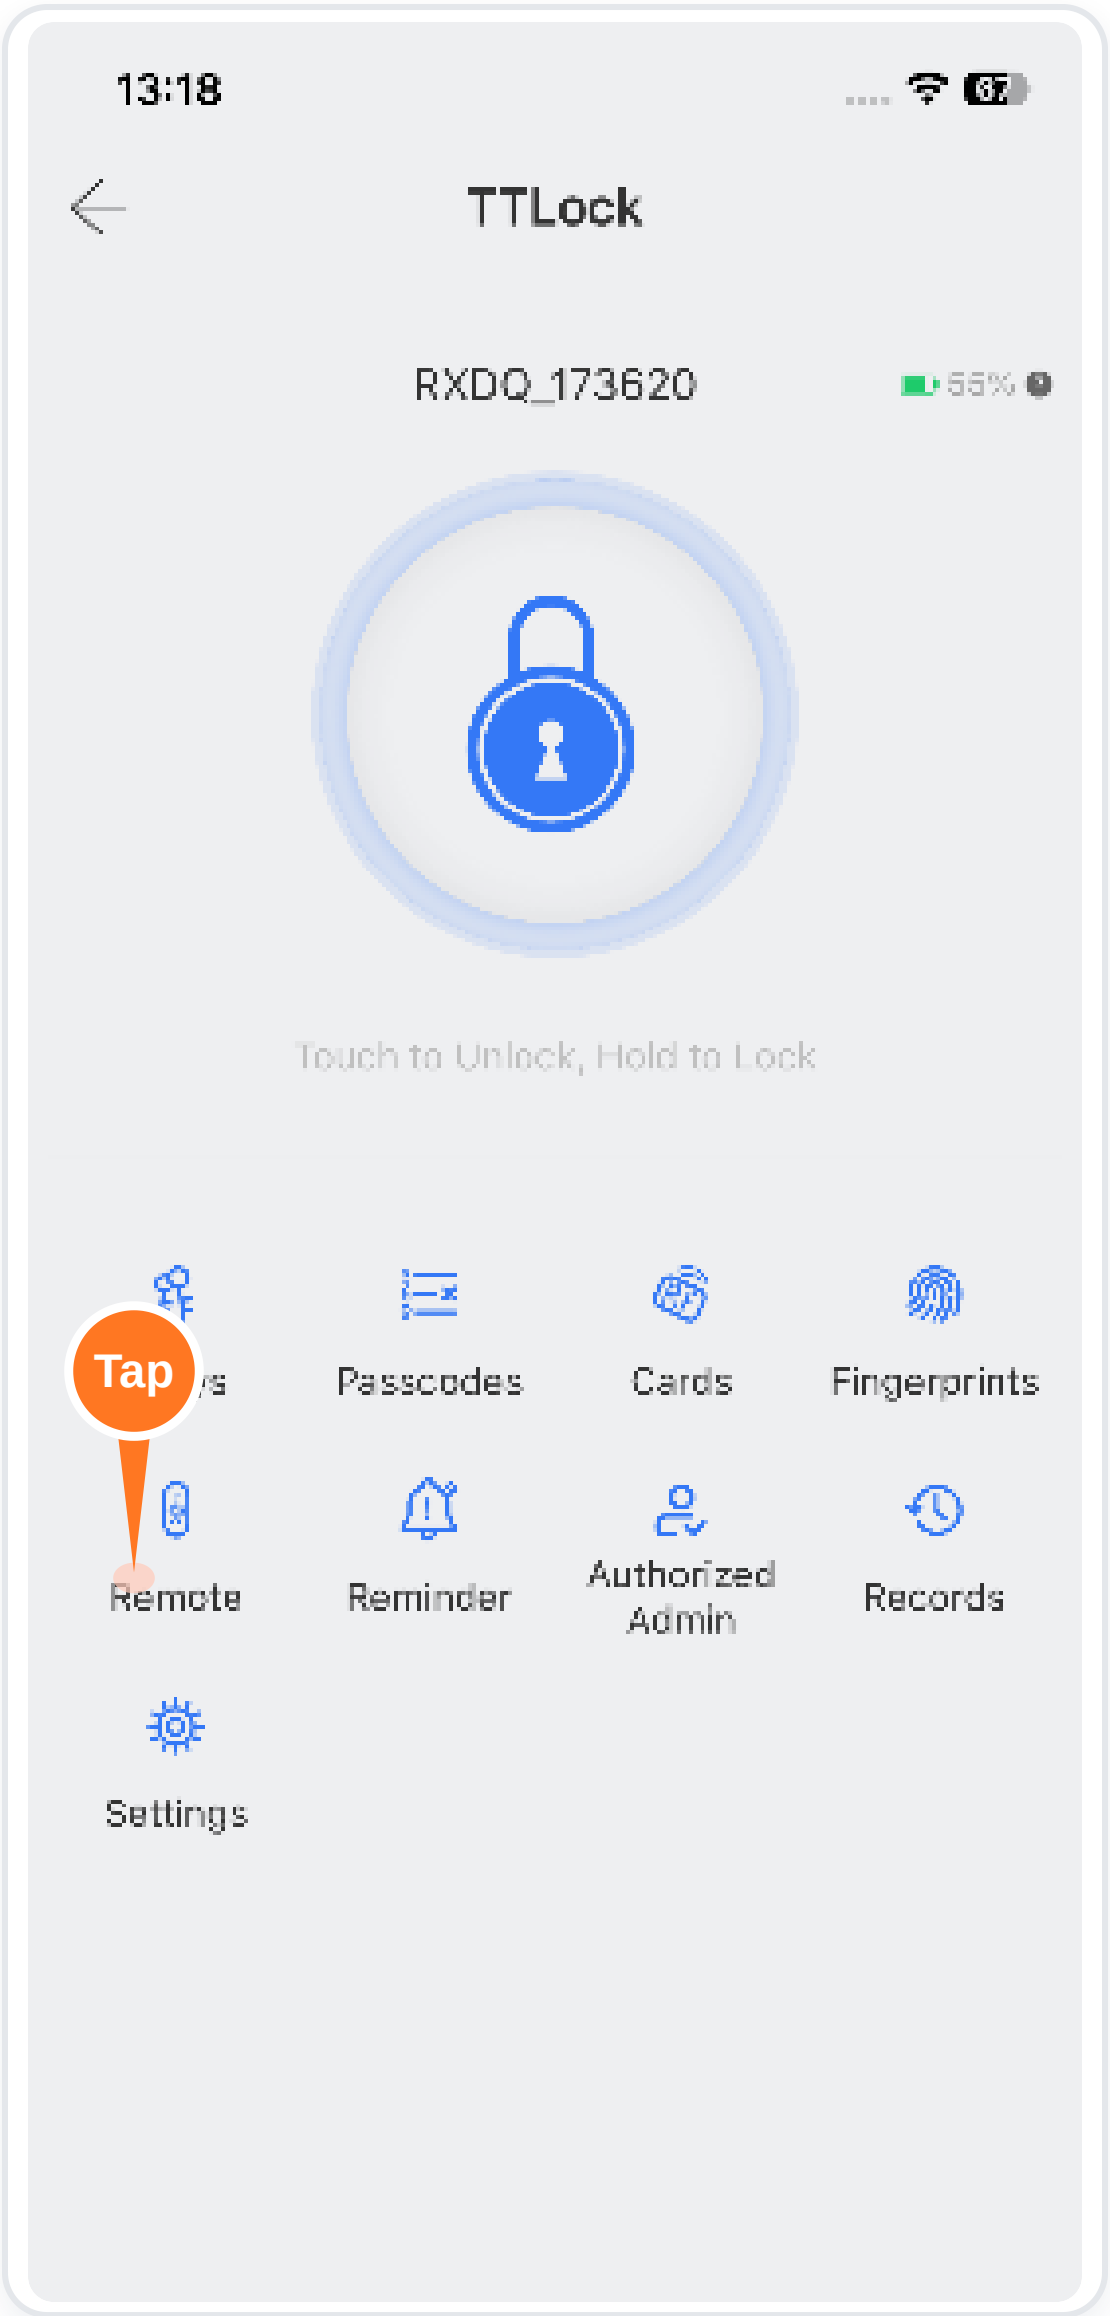


① Tap “Remote”.

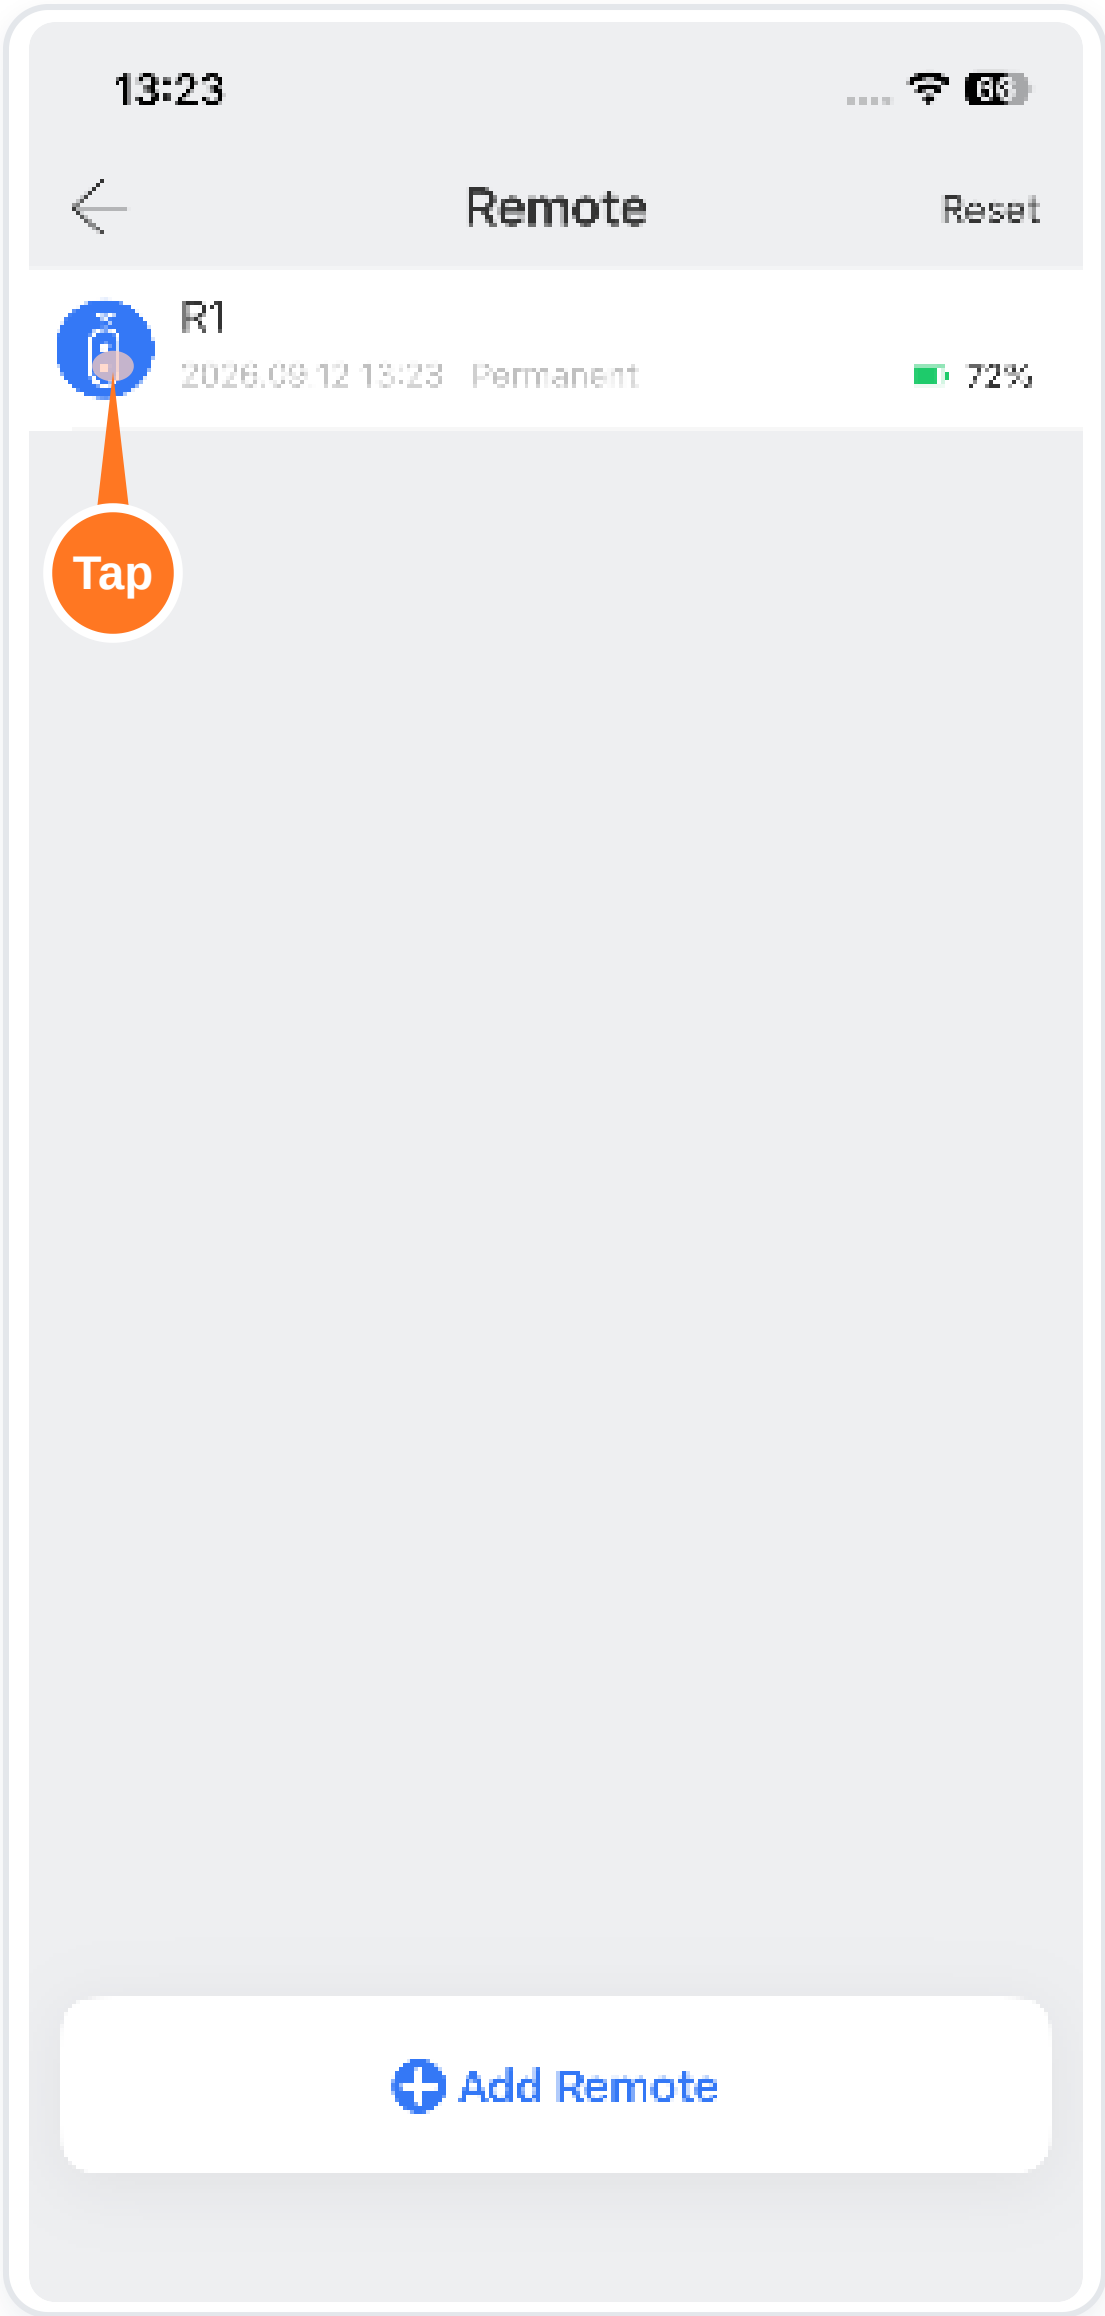

② Tap the device to be deleted.

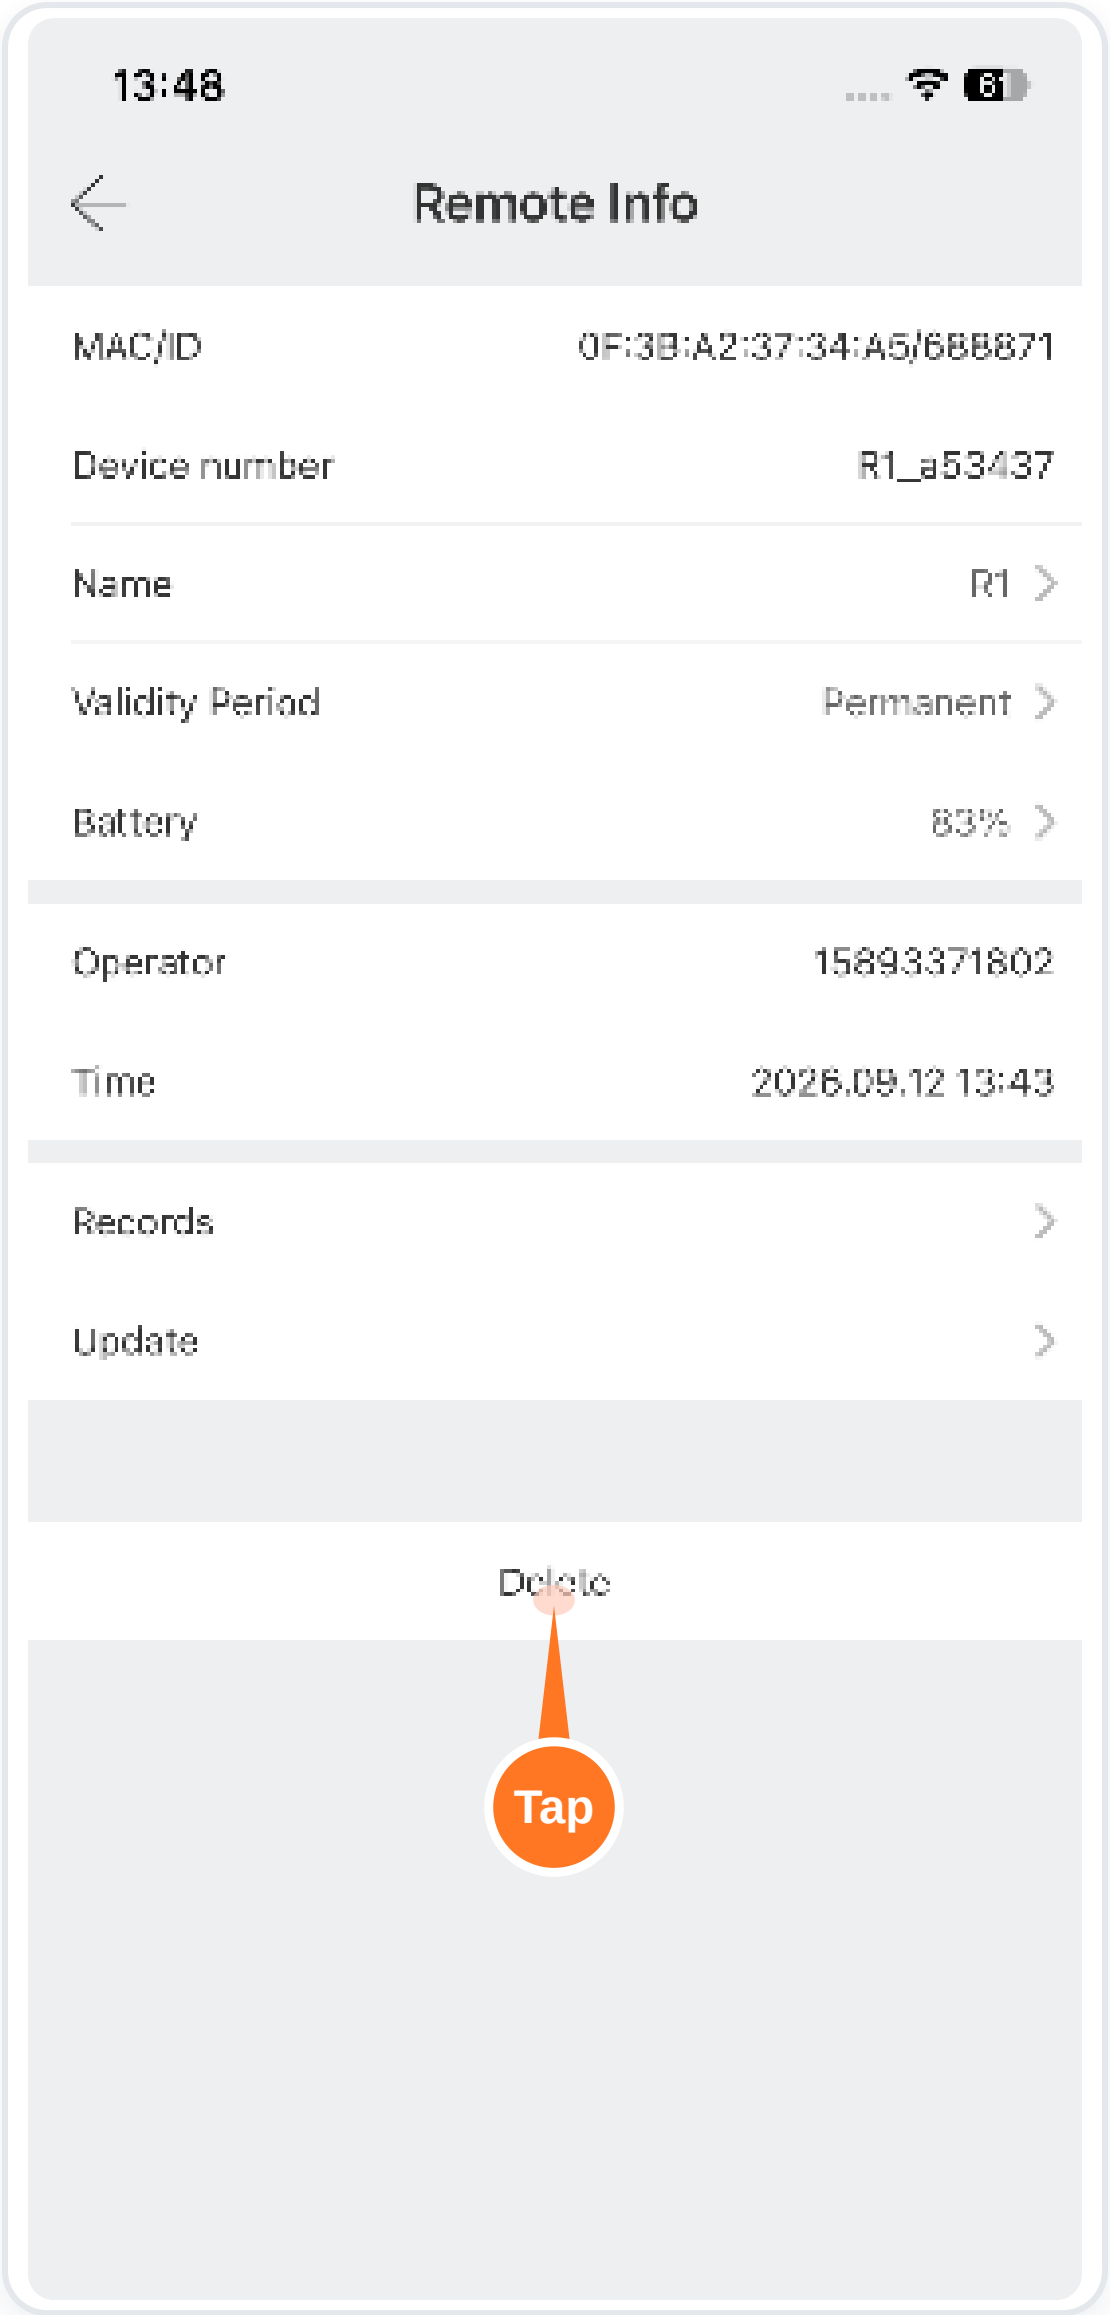

② Tap “Delete”.

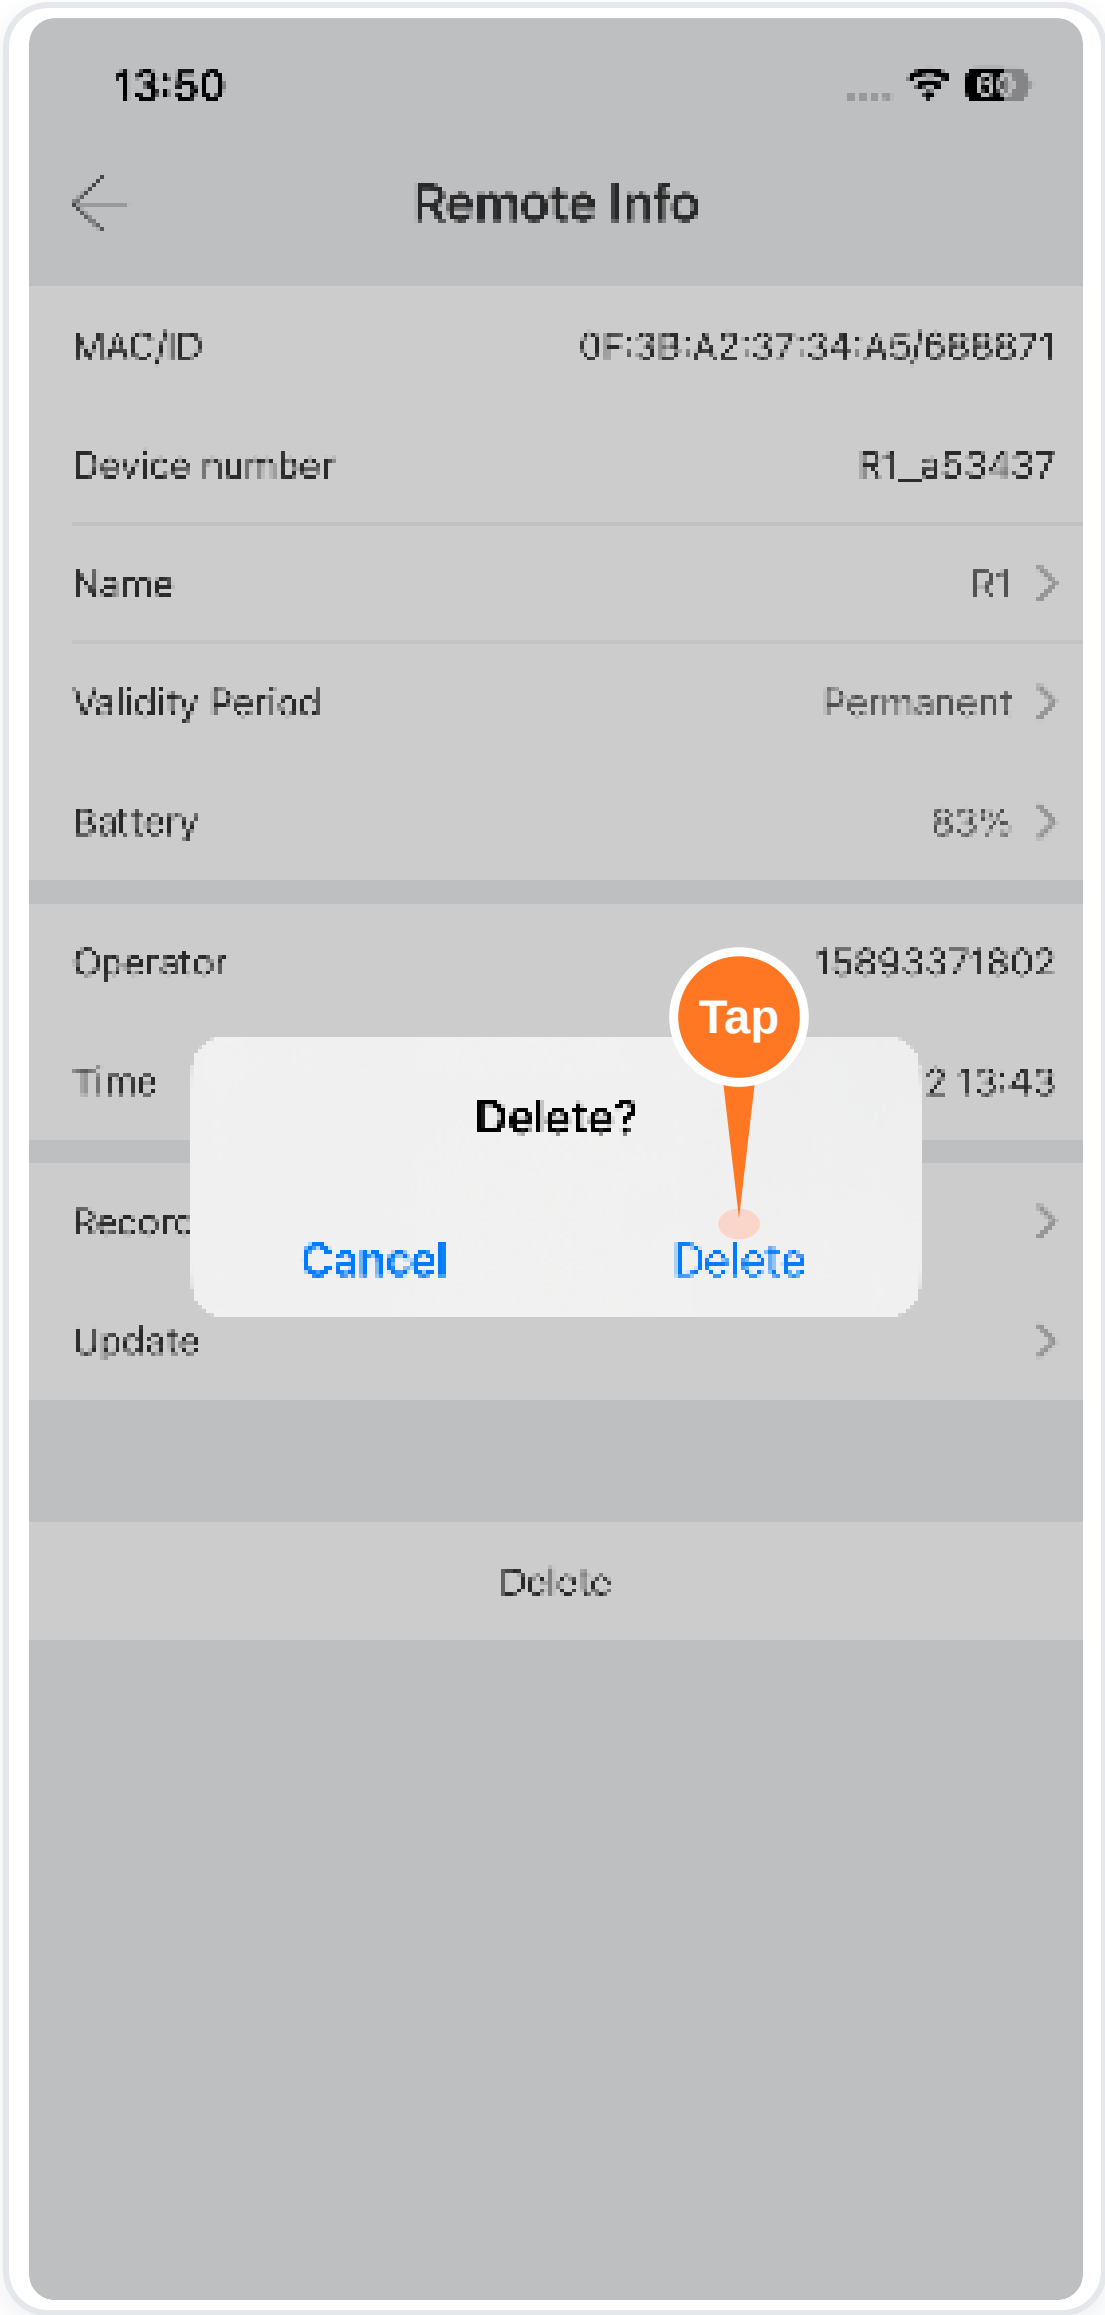

② Confirm the deletion.

1. Pry open the side seam of the housing.
2. Take out the PCBA.
3. Replace the CR2032 battery on the PCBA.
4. Place the PCBA back into position and refit the housing.

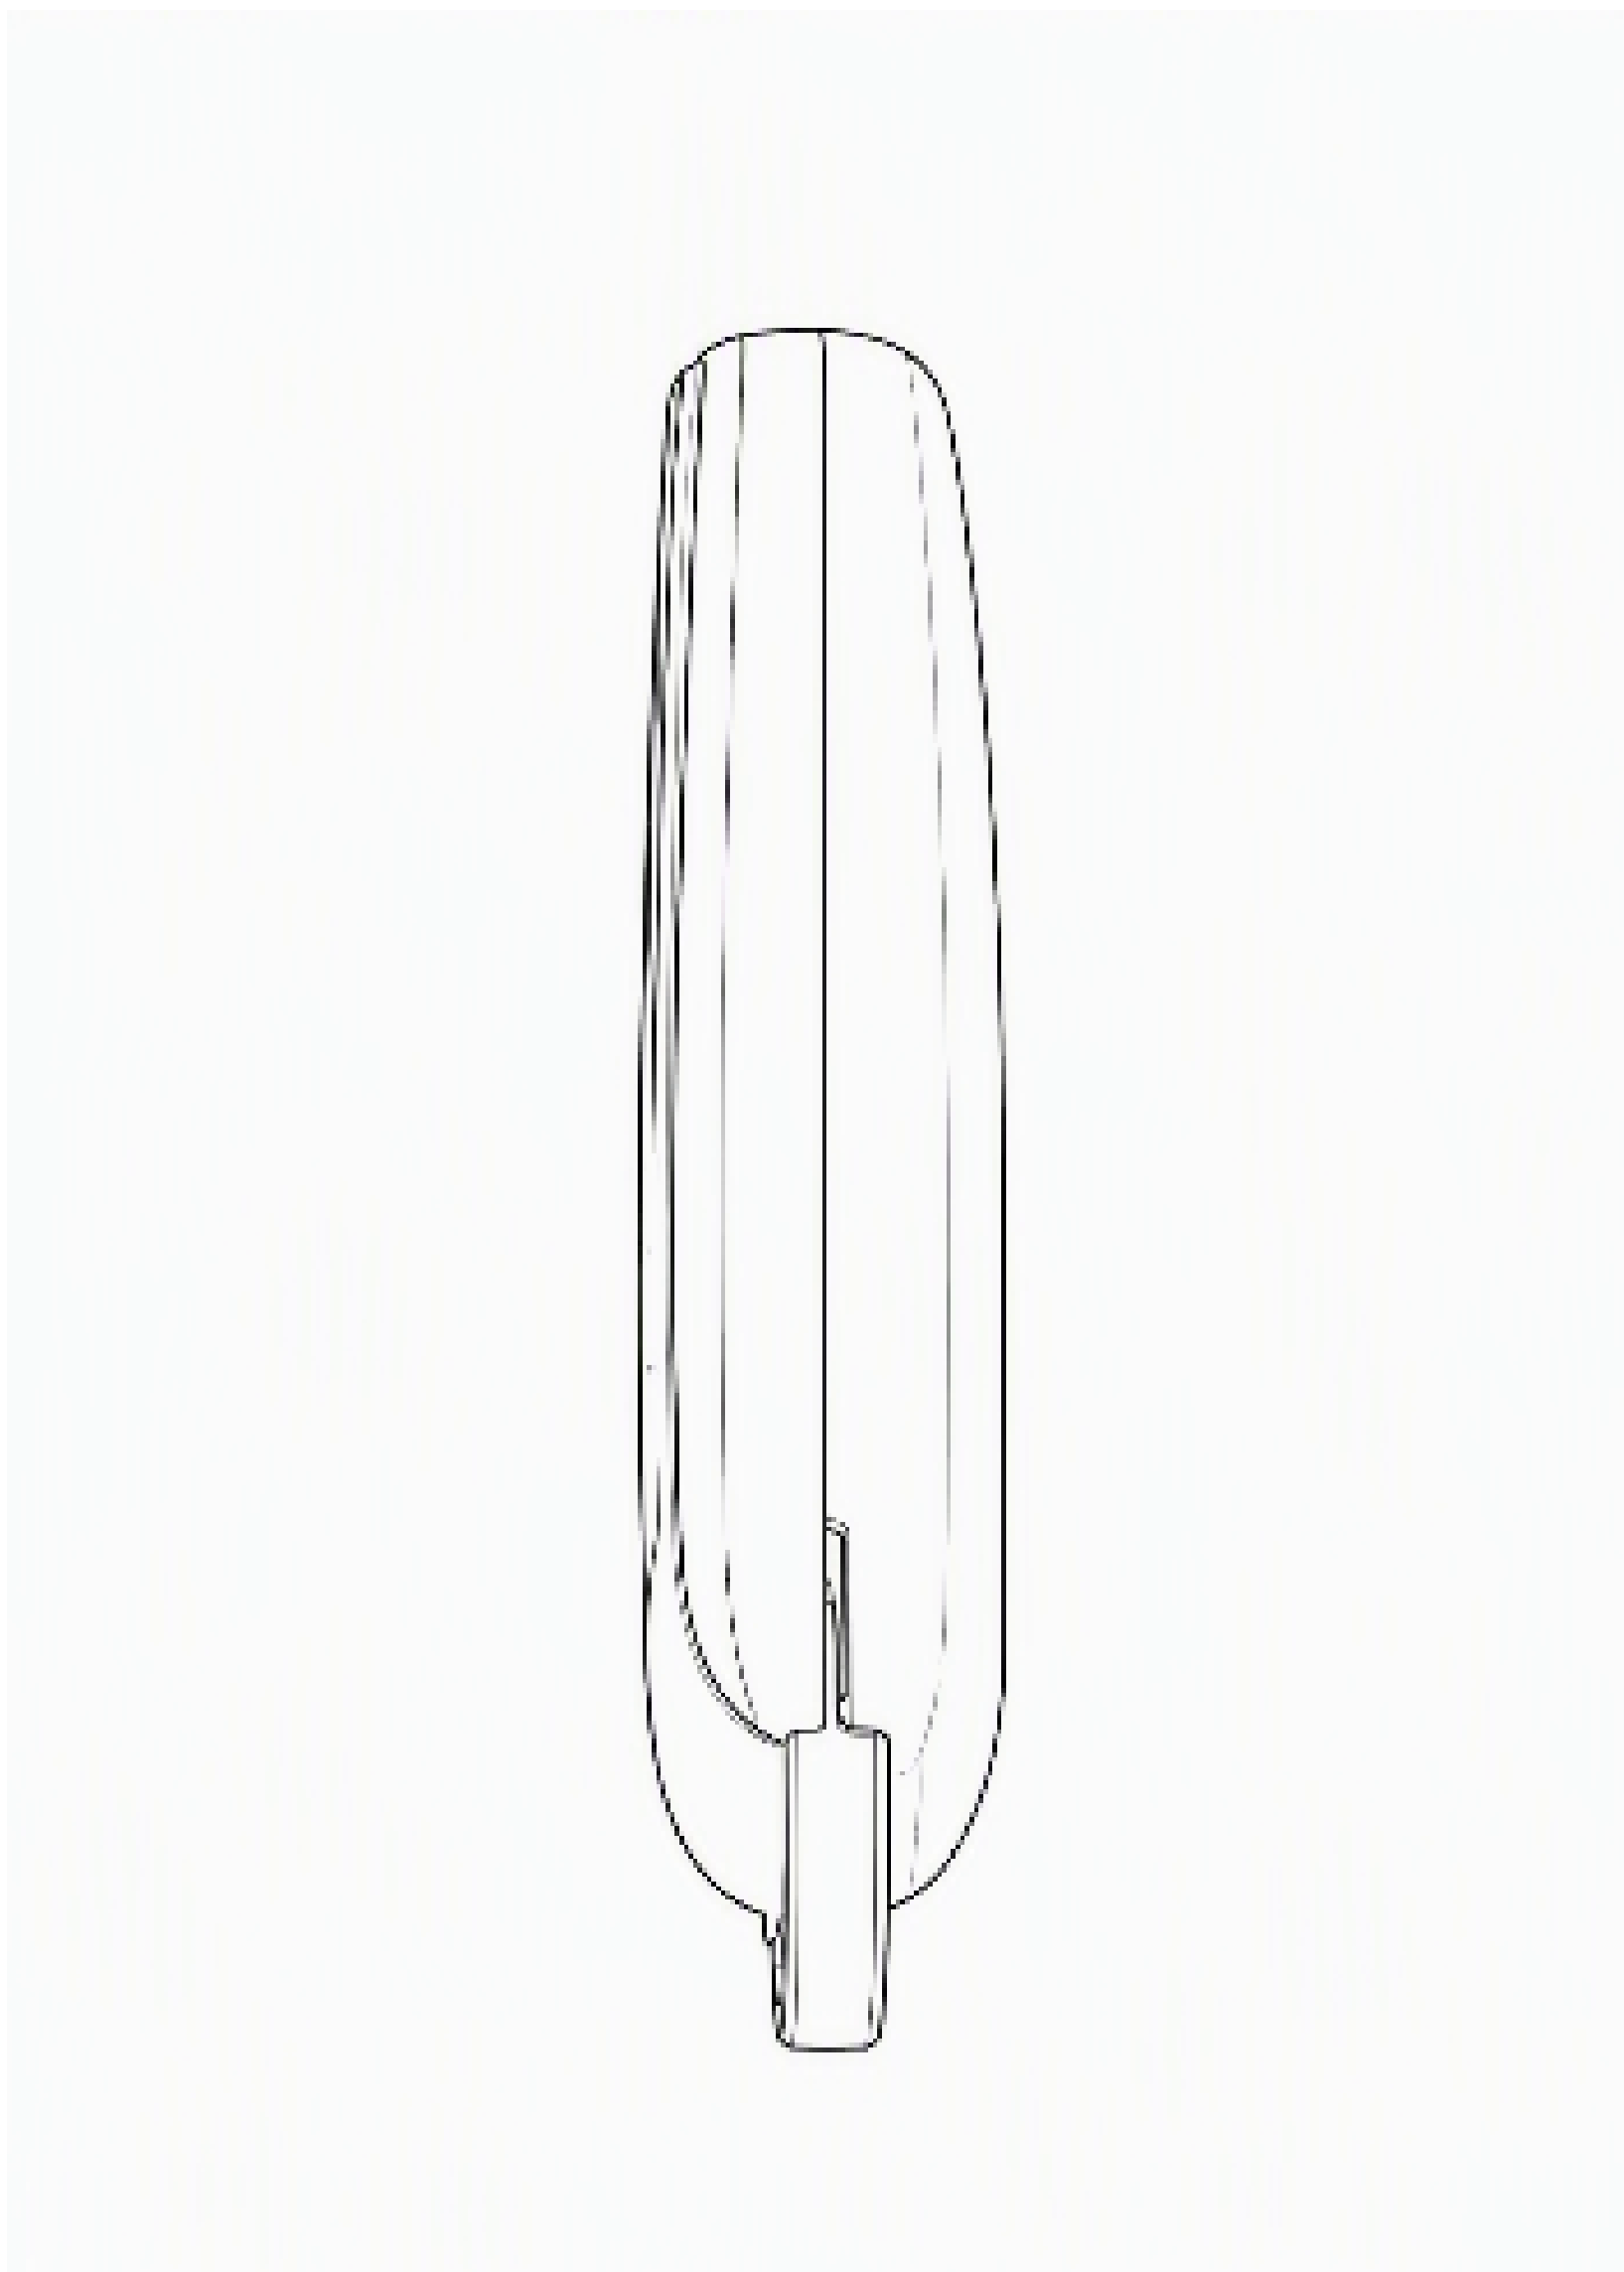


Fig. 1 Pry open the side seam between the two housing halves.

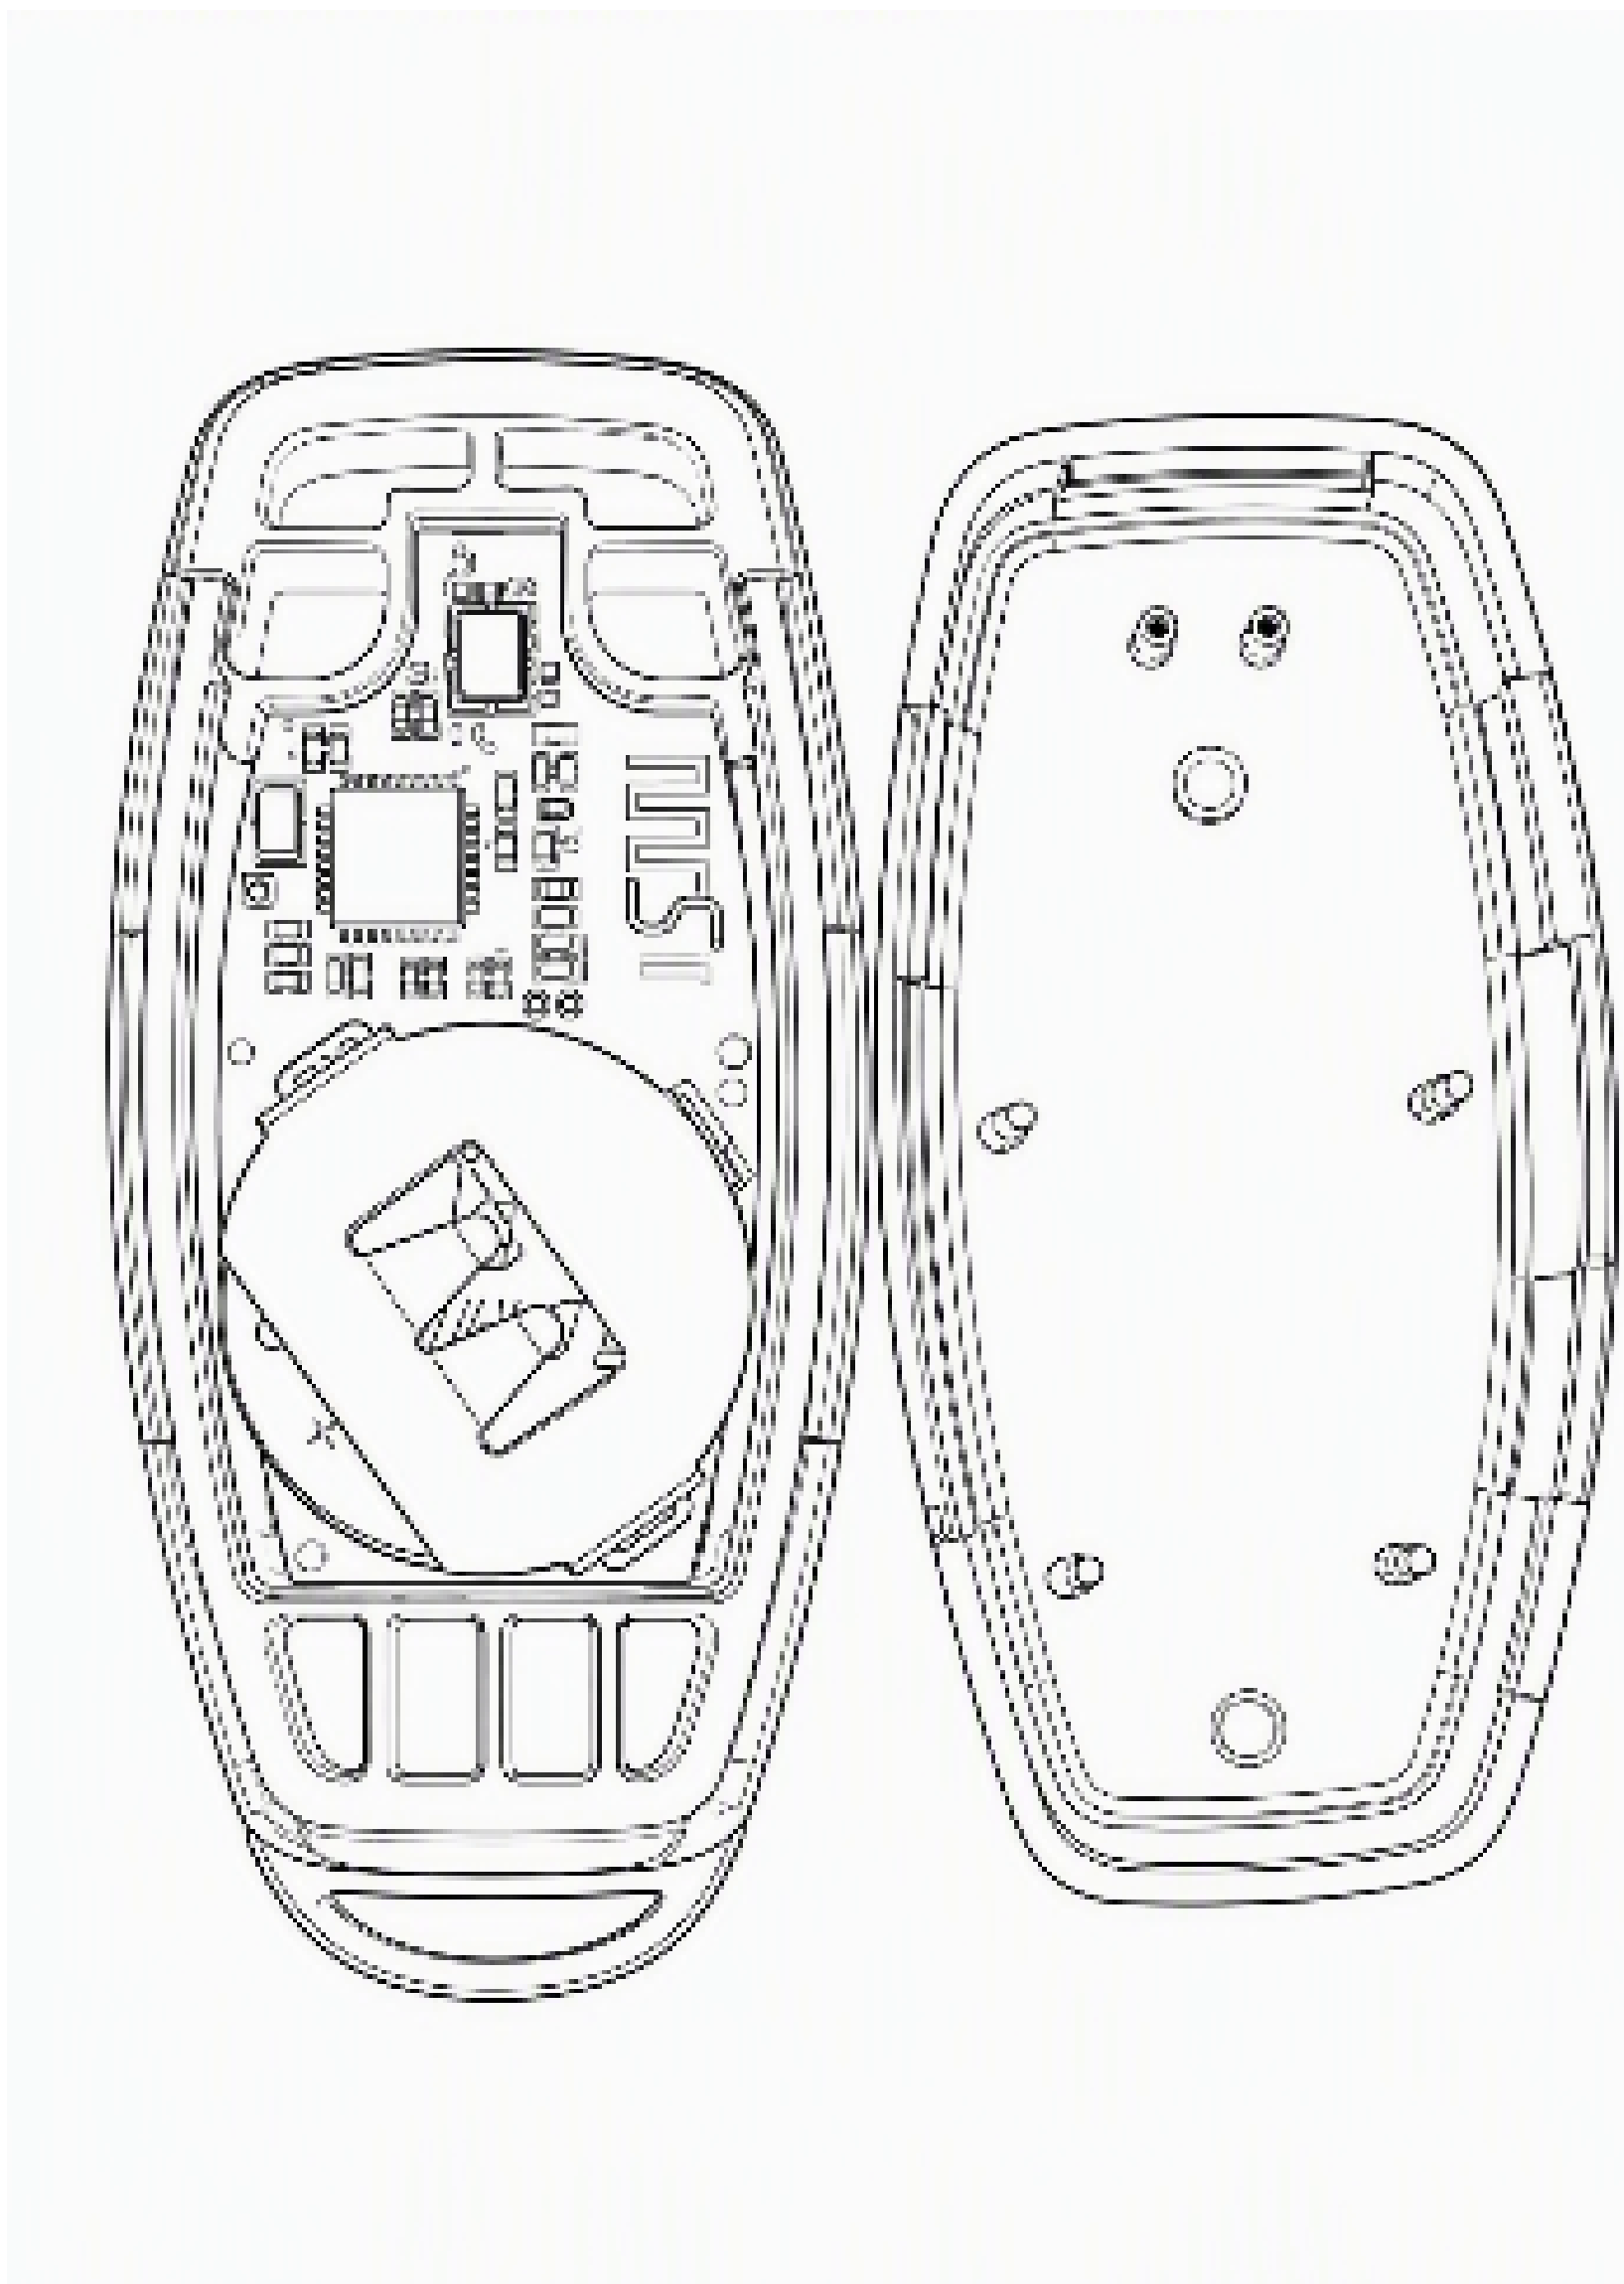


Fig. 2 Lift out the PCBA, replace the CR2032 coin cell, then refit the housing.

BLUSAFE

R1 — Wireless Remote Fob
TTLock app